



**dsPICDEM™ 1.1
Development Board
User's Guide**

Note the following details of the code protection feature on Microchip devices:

- Microchip products meet the specification contained in their particular Microchip Data Sheet.
- Microchip believes that its family of products is one of the most secure families of its kind on the market today, when used in the intended manner and under normal conditions.
- There are dishonest and possibly illegal methods used to breach the code protection feature. All of these methods, to our knowledge, require using the Microchip products in a manner outside the operating specifications contained in Microchip's Data Sheets. Most likely, the person doing so is engaged in theft of intellectual property.
- Microchip is willing to work with the customer who is concerned about the integrity of their code.
- Neither Microchip nor any other semiconductor manufacturer can guarantee the security of their code. Code protection does not mean that we are guaranteeing the product as "unbreakable."

Code protection is constantly evolving. We at Microchip are committed to continuously improving the code protection features of our products. Attempts to break microchip's code protection feature may be a violation of the Digital Millennium Copyright Act. If such acts allow unauthorized access to your software or other copyrighted work, you may have a right to sue for relief under that Act.

Information contained in this publication regarding device applications and the like is intended through suggestion only and may be superseded by updates. It is your responsibility to ensure that your application meets with your specifications. No representation or warranty is given and no liability is assumed by Microchip Technology Incorporated with respect to the accuracy or use of such information, or infringement of patents or other intellectual property rights arising from such use or otherwise. Use of Microchip's products as critical components in life support systems is not authorized except with express written approval by Microchip. No licenses are conveyed, implicitly or otherwise, under any intellectual property rights.

Trademarks

The Microchip name and logo, the Microchip logo, Accuron, dsPIC, KEELOQ, MPLAB, PIC, PICmicro, PICSTART, PRO MATE and PowerSmart are registered trademarks of Microchip Technology Incorporated in the U.S.A. and other countries.


AmpLab, FilterLab, microID, MXDEV, MXLAB, PICMASTER, SEEVAL, SmartShunt and The Embedded Control Solutions Company are registered trademarks of Microchip Technology Incorporated in the U.S.A.

Application Maestro, dsPICDEM, dsPICDEM.net, dsPICworks, ECAN, ECONOMONITOR, FanSense, FlexROM, fuzzyLAB, In-Circuit Serial Programming, ICSP, ICEPIC, microPort, Migratable Memory, MPASM, MPLIB, MPLINK, MPSIM, PICKit, PICDEM, PICDEM.net, PICtail, PowerCal, PowerInfo, PowerMate, PowerTool, rLAB, rPIC, Select Mode, SmartSensor, SmartTel and Total Endurance are trademarks of Microchip Technology Incorporated in the U.S.A. and other countries.

Serialized Quick Turn Programming (SQTP) is a service mark of Microchip Technology Incorporated in the U.S.A.

All other trademarks mentioned herein are property of their respective companies.

© 2003, Microchip Technology Incorporated, Printed in the U.S.A., All Rights Reserved.

 Printed on recycled paper.

**QUALITY MANAGEMENT SYSTEM
CERTIFIED BY DNV
== ISO/TS 16949:2002 ==**

Microchip received ISO/TS-16949:2002 quality system certification for its worldwide headquarters, design and wafer fabrication facilities in Chandler and Tempe, Arizona and Mountain View, California in October 2003. The Company's quality system processes and procedures are for its PICmicro® 8-bit MCUs, KEELOQ® code hopping devices, Serial EEPROMs, microperipherals, non-volatile memory and analog products. In addition, Microchip's quality system for the design and manufacture of development systems is ISO 9001:2000 certified.

Table of Contents

Preface	1
Chapter 1. Introduction	
1.1 Introduction	7
1.2 Highlights	7
1.3 dsPICDEM 1.1 Development Board Kit	7
1.4 dsPICDEM 1.1 Development Board Features	8
1.5 Running the dsPICDEM 1.1 Demonstration Program	10
1.6 Reference Documents	10
Chapter 2. Tutorial	
2.1 Introduction	11
2.2 Highlights	11
2.3 Tutorial Overview	11
2.4 Creating the Project	11
2.5 Building the Code	17
2.6 Programming the Chip	19
2.7 Debugging the Code	22
2.8 Summary	26
Chapter 3. Demonstration Program Operation	
3.1 Introduction	27
3.2 Highlights	27
3.3 Demonstration Program Operation	27
3.4 Data and Control Flow	34
3.5 dsPIC30F Demonstration Performance Metrics	37
3.6 Board Self-Test Code Module Summary	40
Chapter 4. dsPICDEM™ 1.1 Development Hardware	
4.1 dsPICDEM 1.1 Development Board Hardware Overview	41
Appendix A. Hardware Drawings and Schematics	
A.1 Introduction	47
A.2 Highlights	47

dsPICDEM™ 1.1 Development Board User's Guide

Appendix B. LCD Controller Specification

B.1 Overview	55
B.2 LCD Controller Interface	55
B.3 Commands	56
B.4 General Commands	58
B.5 Character Commands	59
B.6 Pixel Commands	61
B.7 Column Commands	62
B.8 Examples	63
Index	65
Worldwide Sales and Service	68

Preface

INTRODUCTION

This chapter contains general information about this user's guide and customer support that will be useful prior to using the dsPICDEM 1.1 Development Board.

HIGHLIGHTS

Items discussed in this chapter are:

- About this Guide
- Warranty Registration
- Recommended Reading
- Troubleshooting
- Microchip On-Line Support
- Customer Change Notification Service
- Customer Support

ABOUT THIS GUIDE

This document describes how to use the dsPICDEM 1.1 Development Board. The manual layout is as follows:

- **Chapter 1: Introduction** – This chapter introduces the dsPICDEM 1.1 Development Board and provides a brief description of the hardware.
- **Chapter 2: Tutorial** – This chapter goes through a basic step-by-step process for getting your dsPICDEM 1.1 Development Board up and running with the MPLAB® In-Circuit Debugger 2 (ICD 2).
- **Chapter 3: Demonstration Program Operation** – This chapter presents a detailed description of the operational functionality of the sample code, which is preprogrammed into the dsPIC30F device.
- **Chapter 4: dsPICDEM 1.1 Development Board Hardware** – This chapter presents the features of the dsPICDEM 1.1 Development Board in more detail.
- **Appendix A: Hardware Schematics** – This Appendix illustrates the dsPICDEM 1.1 Development Board layout and hardware schematic diagrams.
- **Appendix B: LCD Controller Specification** – This section presents the 122 x 32 Graphics LCD Controller Interface Specifications.
- **Index** – This section provides cross-reference listing of terms, features and sections of this document.
- **Worldwide Sales and Service** – A listing of Microchip sales and service locations and telephone numbers worldwide.

dsPICDEM™ 1.1 Development Board User's Guide

Conventions Used in This Guide

This manual uses the following documentation conventions:

TABLE 1: DOCUMENTATION CONVENTIONS

Description	Represents	Examples
Code (Courier font):		
Plain characters	Sample code Filenames and paths	<code>#define START</code> <code>c:\autoexec.bat</code>
Square brackets []	Optional arguments	<code>pic30-as [main.s]</code>
Curly brackets and pipe character: { }	Choice of mutually exclusive arguments; an OR selection	<code>errorlevel {0 1}</code>
Lower case characters in quotes	Type of data	"filename"
Ellipses...	Used to imply (but not show) additional text that is not relevant to the example	<code>list</code> <code>["list_option...</code> <code>"list_option"]</code>
0xnnnn	A hexadecimal number where n is a hexadecimal digit	<code>0xFFFF</code> , <code>0x007A</code>
Italic characters	A variable argument; it can be either a type of data (in lower case characters) or a specific example (in upper case characters)	<code>char isascii (char,</code> <code>ch);</code>
Interface (Arial font):		
Underlined, italic text with right arrow	A menu selection from the menu bar	<i><u>File > Save</u></i>
Bold characters	A window or dialog button to click	OK, Cancel
Characters in angle brackets < >	A key on the keyboard	<Tab>, <Ctrl-C>
Documents (Arial font):		
Italic characters	Referenced books	<i>MPLAB IDE User's Guide</i>

Documentation Updates

All documentation becomes dated, and this user's guide is no exception. Since the *dsPICDEM 1.1 Development Board User's Guide* and other Microchip tools are constantly evolving to meet customer needs, some actual dialogs and/or tool descriptions may differ from those in this document. Please refer to our web site to obtain the latest documentation available.

Documentation Numbering Conventions

Documents are numbered with a "DS" number. The number is located on the bottom of each page, in front of the page number. The numbering convention for the DS Number is: DSXXXXXA;

where:

XXXXX = The document number.

A = The revision level of the document.

WARRANTY REGISTRATION

Please complete the enclosed Warranty Registration Card and mail it promptly. Sending in your Warranty Registration Card entitles you to receive new product updates. Interim software releases are available at the Microchip web site.

RECOMMENDED READING

This user's guide describes how to use the dsPICDEM 1.1 Development Board. Other useful documents are listed below:

dsPIC30F Family Reference Manual (DS70046)

Consult this document for detailed information on the dsPIC30F device operation. The manual explains the operation of the dsPIC30F MCU family architecture and peripheral modules but does not cover the specifics of each device. Refer to the appropriate device data sheet, mentioned below, for device-specific information.

dsPIC30F Data Sheet, Motor Control and Power Conversion Family (DS70082)

Consult this document for information regarding the dsPIC30F Motor Control and Power Conversion devices. Reference information found in this data sheet includes:

- Device memory map
- Device pinout and packaging details
- Device electrical specifications
- List of peripherals included on the device

dsPIC30F Data Sheet, General Purpose and Sensor Families (DS70083)

Consult this document for information regarding the dsPIC30F Sensor and General Purpose devices. Reference information found in this data sheet includes:

- Device memory map
- Device pinout and packaging details
- Device electrical specifications
- List of peripherals included on the device

dsPIC30F Programmer's Reference Manual (DS70030)

This manual is a software developer's reference for the dsPIC30F 16-bit MCU family of devices. This manual describes the instruction set in detail and also provides general information to assist the user in developing software for the dsPIC30F MCU family.

dsPIC30F Family Overview, dsPIC High Performance 16-bit Digital Signal Controller (DS70043)

This document provides an overview of the features and functionality of the dsPIC[®] product family. It helps determine how the dsPIC 16-bit Digital Signal Controller Family fits a specific product application. For detailed information about any of the functionality, refer to the *dsPIC30F Family Reference Manual* (DS70046).

MPLAB ASM30, MPLAB LINK30 and Utilities User's Guide (DS51317)

This document details Microchip Technology's language tools for dsPIC devices based on GNU technology. The language tools discussed are:

- MPLAB ASM30 Assembler
- MPLAB LINK30 Linker
- MPLAB LIB30 Archiver/Librarian
- Other Utilities

MPLAB C30 C Compiler User's Guide (DS51284)

The purpose of this document is to help you use Microchip's MPLAB C30 C compiler for dsPIC devices to develop your application. MPLAB C30 is a GNU-based language tool, based on source code from the Free Software Foundation (FSF). For more information about the FSF, see www.fsf.org.

dsPICDEM™ 1.1 Development Board User's Guide

Other GNU language tools available from Microchip are:

- MPLAB ASM30 Assembler
- MPLAB LINK30 Linker
- MPLAB LIB30 Librarian/Archiver

MPLAB IDE Simulator, Editor User's Guide (DS51025)

Consult this document for more information pertaining to the installation and features of the MPLAB Integrated Development Environment (IDE) Software.

To obtain any of these documents, contact the nearest Microchip sales location (see back page) or visit the Microchip web site at: www.microchip.com.

THE MICROCHIP WEB SITE

Microchip provides online support on the Microchip World Wide Web (WWW) site. The web site is used by Microchip as a means to make files and information easily available to customers. To view the site, you must have access to the Internet and a web browser, such as, Netscape Navigator® or Microsoft® Internet Explorer.

The Microchip web site is available by using your favorite Internet browser to reach:

<http://www.microchip.com>

The web site provides a variety of services. Users may download files for the latest development tools, data sheets, application notes, user's guides, articles and sample programs. A variety of information specific to the business of Microchip is also available, including listings of Microchip sales offices, distributors and factory representatives.

Technical Support

- Frequently Asked Questions (FAQ)
- Online Discussion Groups – conferences for products, development systems, technical information and more
- Microchip Consultant Program Member Listing
- Links to other useful web sites related to Microchip products

Engineer's Toolbox

- Design Tips
- Device Errata

Other Available Information

- Latest Microchip Press Releases
- Listing of seminars and events
- Job Postings

DEVELOPMENT SYSTEMS CUSTOMER NOTIFICATION SERVICE

Microchip started the customer notification service to help our customers keep current on Microchip products with the least amount of effort. Once you subscribe, you will receive e-mail notification whenever we change, update, revise or have errata related to a specified product family or development tool of interest.

Go to the Microchip web site at (<http://www.microchip.com>) and click on Customer Change Notification. Follow the instructions to register.

The Development Systems product group categories are:

- Compilers
- Emulators
- In-Circuit Debuggers
- MPLAB IDE
- Programmers

Here is a description of these categories:

Compilers – The latest information on Microchip C compilers and other language tools. These include the MPLAB C17, MPLAB C18 and MPLAB C30 C compilers; MPASM™ and MPLAB ASM30 assemblers; MPLINK™ and MPLAB LINK30 object linkers; MPLIB™ and MPLAB LIB30 object librarians.

Emulators – The latest information on Microchip in-circuit emulators. This includes the MPLAB ICE 2000 and MPLAB ICE 4000.

In-Circuit Debuggers – The latest information on Microchip in-circuit debuggers. These include the MPLAB ICD and MPLAB ICD 2.

MPLAB IDE – The latest information on Microchip MPLAB IDE, the Windows Integrated Development Environment for development systems tools. This list is focused on the MPLAB IDE, MPLAB SIM and MPLAB SIM30 simulators, MPLAB IDE Project Manager and general editing and debugging features.

Programmers – The latest information on Microchip device programmers. These include the PRO MATE® II device programmer and PICSTART® Plus development programmer.

dsPICDEM™ 1.1 Development Board User's Guide

CUSTOMER SUPPORT

Users of Microchip products can receive assistance through several channels:

- Distributor or Representative
- Local Sales Office
- Field Application Engineer (FAE)
- Corporate Applications Engineer (CAE)
- Hotline

Customers should call their distributor, representative or field application engineer (FAE) for support. Local sales offices are also available to help customers. See the back cover for a list of sales offices and locations.

Corporate Applications Engineers (CAEs) may be contacted at (480) 792-7627.

In addition, there is a Systems Information and Upgrade Line. This line provides system users a list of the latest versions of all of Microchip's development systems software products. Plus, this line provides information on how customers can receive any currently available upgrade kits.

The Hotline Numbers are:

1-800-755-2345 for U.S. and most of Canada.

1-480-792-7302 for the rest of the world.

Chapter 1. Introduction

1.1 INTRODUCTION

The dsPICDEM 1.1 Development Board Kit serves as a development and evaluation tool for the dsPIC30F High Performance Digital Signal Controllers.

1.2 HIGHLIGHTS

This chapter discusses:

- dsPICDEM 1.1 Development Board Kit
- dsPICDEM 1.1 Development Board Features
- Running the dsPICDEM 1.1 Demonstration Program
- Reference Documents

1.3 dsPICDEM 1.1 DEVELOPMENT BOARD KIT

The dsPICDEM 1.1 Development Board Kit contains the following items:

- The dsPICDEM 1.1 Printed Circuit Board (Figure 1-1)
- Preprogrammed dsPIC30F6014 Plug-in Module (Figure 1-2)
- 9V DC Power Supply
- RS-232 Interface Cable
- dsPICDEM 1.1 Development Board Kit CD containing demonstration programs

FIGURE 1-1: dsPICDEM 1.1 DEVELOPMENT BOARD


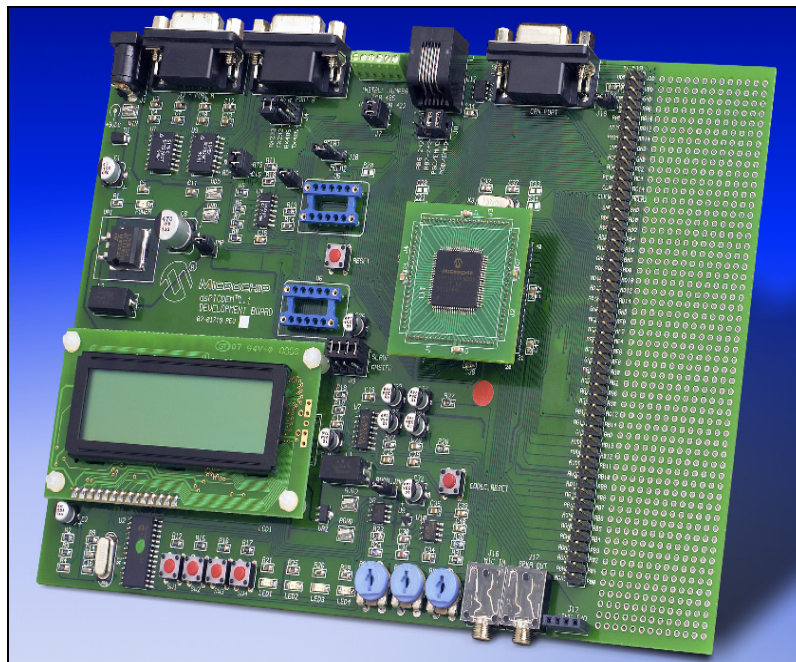


FIGURE 1-2: dsPIC30F6014 PLUG-IN MODULE

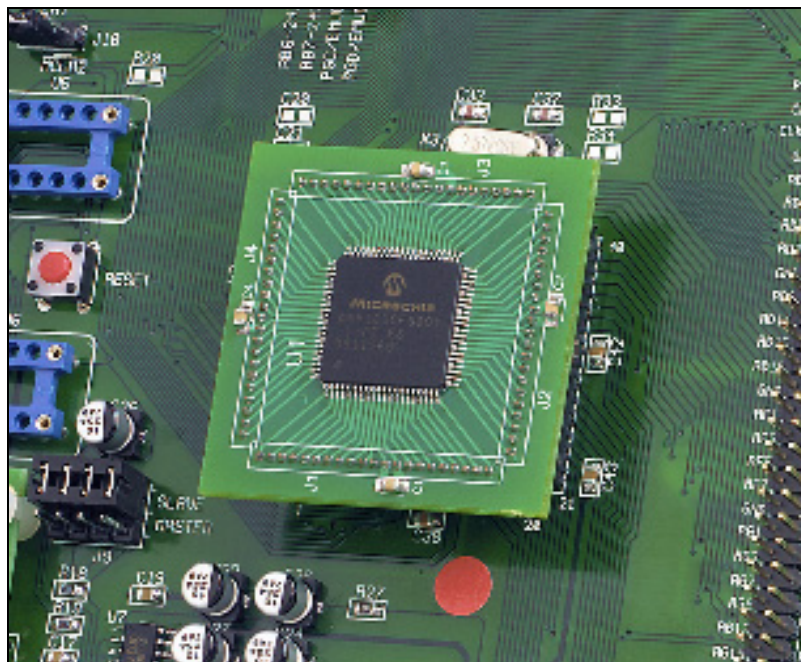

1.4 dsPICDEM 1.1 DEVELOPMENT BOARD FEATURES

The dsPICDEM 1.1 Development Board supports the following features:

Development Board Power

- Separate on-board +5V regulators for VDD and AVDD with direct input from 9V, AC/DC wall adapter
- 9V DC power source input jack for development board
- LED Power-on indicator

MPLAB ICD 2 and MPLAB ICE 4000 Connections

- MPLAB ICD 2 programming connector
- Jumper J8 for selection of processor interfaced to the MPLAB ICD 2 Debugger/Programmer
- Emulation header for connection to MPLAB ICE 4000 Emulator
- Pad location for 80-pin TQFP dsPIC device

Serial Communication Channels

- Two RS-232 communication channels
- 6-pin terminal block and configuration jumper for RS-485 and RS-422 communication on UART1 from the dsPIC device
- Single CAN communication channel

Voice-band Codec

- Si3000 Voice-band Codec chip
- Jumper J9 for selection of Si3000 Codec mode (Master/Slave)
- Socket U6, optional clock oscillator for Si3000 Voice-band Codec
- 4-pin header for the Codec Line In and Line Out
- One 3.5 mm phono jack for the Codec left and right speaker outputs
- One 3.5 mm phono jack for the Codec MIC input
- Codec reset push button switch

Analog

- Three 5 k Ω Potentiometers (RP1-RP3)
- Microchip TC1047A Thermal Sensor (U9)
- MCP41010 Digital Potentiometer
- MCP602 Operational Amplifiers configured as low-pass filters for temperature sensor and digital potentiometer

Device Clocking

- 7.3728 MHz crystal, X3, for dsPIC device
- Socket U5, clock oscillator for dsPIC device (alternate clock source, X3 removed)
- Pad for 32.768 kHz crystal and load caps

Miscellaneous

- Reset push button switch and jumper (J10) for resetting the PIC18F242 LCD controller or the dsPIC device
- Four red LEDs (LED1-LED4)
- Four push button switches (SW1-SW4) for external input stimulus
- 122 x 32 dot addressable LCD
- PIC18F242 LCD controller
- 2 x 50 prototyping header for user hardware expansion (header not installed)
- Prototype area for user hardware

dsPICDEM™ 1.1 Development Board User's Guide

1.5 RUNNING THE dsPICDEM 1.1 DEMONSTRATION PROGRAM

The dsPICDEM 1.1 Development Board is supplied with a pre-loaded demonstration program that exercises principal CPU functions and peripheral options that interact with typical user application programs.

When you apply power to the dsPICDEM 1.1 Development Board, the LCD menu displays these demonstration functions:

- Data Acquisition Display
- Digital Signal Processing (DSP) Operations
- Dual Tone Multi-Frequency (DTMF) Generation

Switches SW2-SW4 select one of these three choices. Each choice offers a submenu, which provides for additional options using switches SW1-SW4.

Refer to **Chapter 3. "Demonstration Program Operation"** for full details on the demonstration code operation.

1.6 REFERENCE DOCUMENTS

The following documentation is available to support the use of the dsPICDEM 1.1 Development Board:

- dsPIC30F Family Reference Manual (DS70046)
- dsPIC30F Data Sheet, Motor Control and Power Conversion Family (DS70082)
- dsPIC30F Data Sheet, General Purpose and Sensor Families (DS70083)
- dsPIC30F Programmer's Reference Manual (DS70030)
- dsPIC30F Family Overview, dsPIC High Performance 16-bit Digital Signal Controller (DS70043)
- MPLAB C30 C Compiler User's Guide (DS51284)
- MPLAB ASM30, MPLAB LINK30 and Utilities User's Guide (DS51317)
- MPLAB ICD 2 In-Circuit Debugger Quick Start Guide (DS51268)
- MPLAB ICE Emulator User's Guide (DS51159)

You can obtain these reference documents from your nearest Microchip sales office (listed in the back of this document) or you can download them from the Microchip web site (www.microchip.com).

Chapter 2. Tutorial

2.1 INTRODUCTION

This chapter is a self-paced tutorial to get you started using the dsPICDEM 1.1 Development Board.

2.2 HIGHLIGHTS

Items discussed in this chapter include:

- Tutorial Overview
- Creating the Project
- Building the Code
- Programming the Chip
- Debugging the Code
- Summary

2.3 TUTORIAL OVERVIEW

The tutorial program in `Tut6014.s` is written in assembly code. This program displays text on the LCD and flashes an LED. The source file is used with a linker script file (`p30f6014.gld`) and an include file (`p30f6014.inc`) to form a complete project. The tutorial is a simple project that uses a single source code file. More complex projects might use multiple assembler and compiler source files as well as library files and precompiled object files. For simplicity, this tutorial uses only one source file.

There are four steps to this tutorial:

1. Create a project in MPLAB IDE.
2. Assemble and link the code.
3. Program the chip with the MPLAB ICD 2.
4. Debug the code with the MPLAB ICD 2.

2.4 CREATING THE PROJECT

The first step is to create a project and a workspace in MPLAB IDE. Usually, you will have one project in one workspace.

Note: These instructions presume the use of MPLAB 6.31 or newer.

A project contains the files needed to build an application (source code, linker script files, etc.) along with their associations to various build tools and build options.

A workspace contains one or more projects and information on the selected device, debug tool and/or programmer, open windows and their location, and other IDE configuration settings.

dsPICDEM™ 1.1 Development Board User's Guide


MPLAB IDE contains a Project Wizard to help create new projects. Before starting, create a folder for the project files for this tutorial (C:\Tutorial is assumed in the instructions that follow). From the dsPICDEM 1_1 Development Board code\Tutorial Code folder on the dsPICDEM 1.1 Development Kit CD, copy the Tut6014.s file into the C:\Tutorial folder.

Note: All files copied from the CD are read only. If the file needs to be edited, the attributes will need to be changed.

2.4.1 Select a Device


1. Start MPLAB IDE.
2. Close any workspace that might be open (*File>Close Workspace*).
3. From the *Project* menu, select *Project Wizard*.
4. From the Welcome screen, click **Next>** to display the Project Wizard Step One dialog (see Figure 2-1).

FIGURE 2-1: PROJECT WIZARD, STEP 1, SELECT A DEVICE

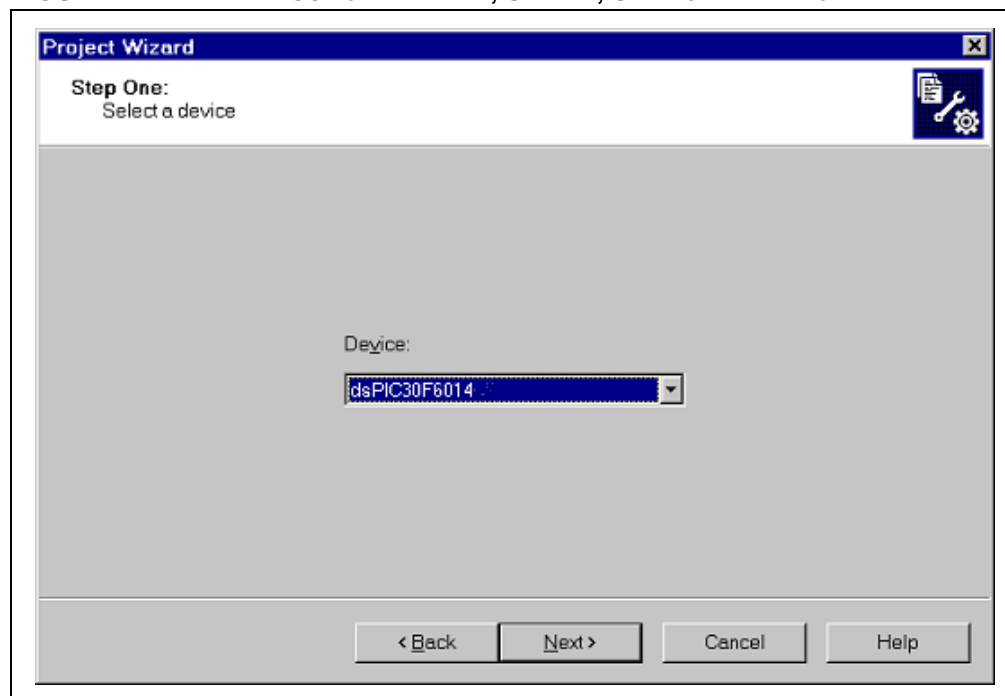

5. From the **Device:** pull-down list, select dsPIC30F6014 and click **Next>**. The Project Wizard Step Two dialog displays (see Figure 2-2).

FIGURE 2-2: PROJECT WIZARD, STEP 2, SELECT LANGUAGE TOOLSUITE

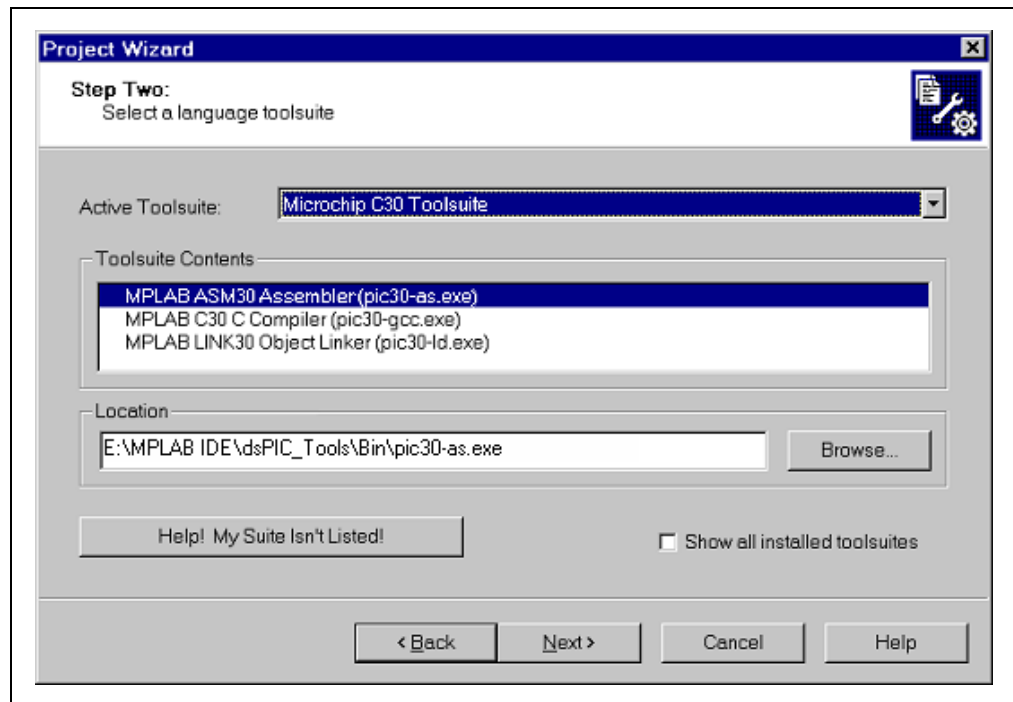


2.4.2 Select Language Toolsuite

1. From the **Active Toolsuite:** pull-down menu, select **Microchip C30 Toolsuite**. This toolsuite includes the assembler and linker that will be used (the C Compiler is not used).
2. In the **Toolsuite Contents** block, select **MPLAB ASM30 Assembler (pic30-as.exe)**.
3. In the **Location** block, click **Browse...** and navigate to:
E:\MPLAB IDE\dsPIC_Tools\Bin\pic30-as.exe
4. With **MPLAB LINK 30 Object Linker (pic30-ld.exe)** selected in **Toolsuite Contents**, click **Browse...** and navigate to:
E:\MPLAB IDE\dsPIC_Tools\Bin\pic30-ld.exe
5. Click **Next>** to continue. The Project Wizard Step Three dialog displays (see Figure 2-3).

Note: The tool locations for your environment may be different from those shown in this tutorial.


FIGURE 2-3: PROJECT WIZARD, STEP 3, NAME YOUR PROJECT

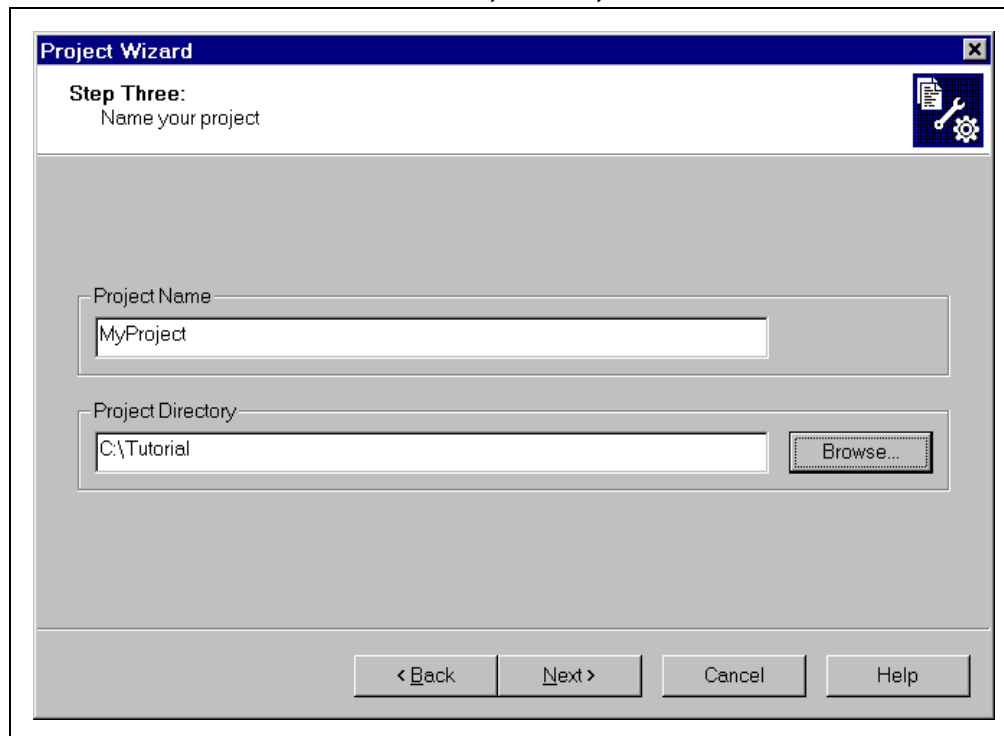

2.4.3 Name Your Project

1. In the **Project Name** text box, type **MyProject**.
2. Click **Browse...** and navigate to C:\Tutorial to place your project in the Tutorial folder.
3. Click **Next>** to continue. The Project Wizard Step Four dialog displays (see Figure 2-4).

FIGURE 2-4: PROJECT WIZARD, STEP 4, ADD FILES TO PROJECT

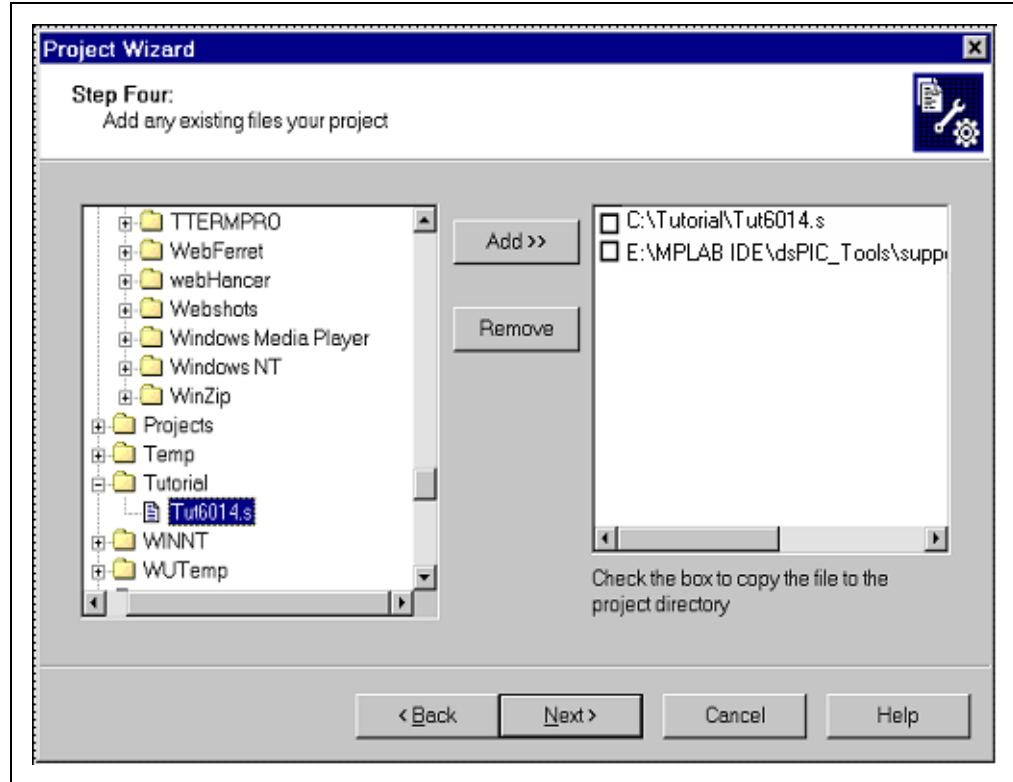


2.4.4 Add Files to Project

1. Locate the C:\Tutorial folder and select the Tut6014.s file.
2. Click **Add>>** to include the file in the project.
3. Expand the E:\MPLAB IDE\dsPIC_Tools\support\gld folder and select the p30f6014.gld file.
4. Click **Add>>** to include the file in the project. There should now be two files in the project.
5. Click **Next>** to continue.
6. When the summary screen displays, click **Finish**.

After the project wizard completes, the MPLAB IDE project window shows the Tut6014.s file in the **Source Files** folder and the p30f6014.gld file in the **Linker Scripts** folder (see Figure 2-5).


dsPICDEM™ 1.1 Development Board User's Guide

FIGURE 2-5: MPLAB IDE PROJECT WINDOW

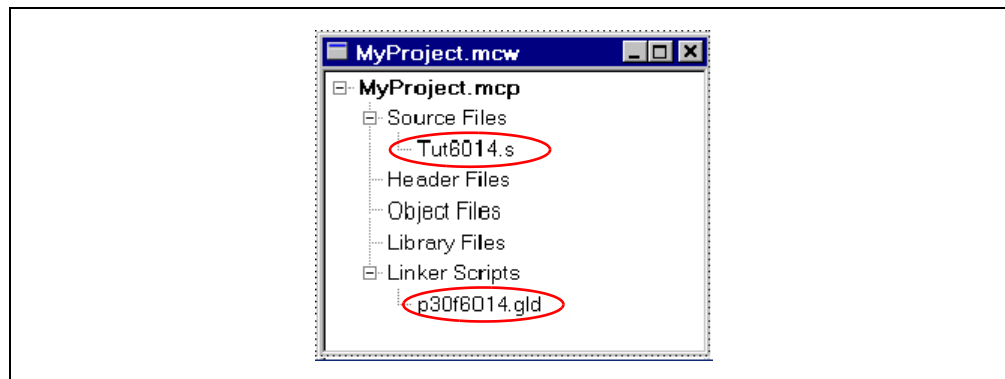

A project and workspace has now been created in MPLAB IDE. MyProject.mcw is the workspace file and MyProject.mcp is the project file. Double-click the Tut6014.s file in the project window to open the file. MPLAB IDE should now look similar to Figure 2-6.

FIGURE 2-6: MPLAB IDE WORKSPACE WINDOWS

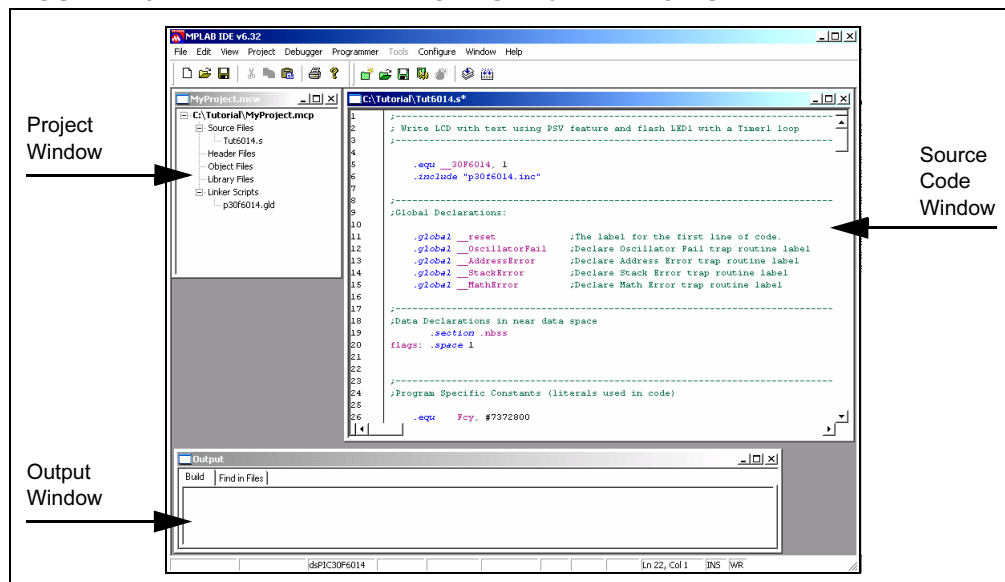

2.5 BUILDING THE CODE

In this project, building the code consists of assembling the `Tut6014.s` file to create an object file, `Tut6014.o`, and then linking the object file to create the `Tut6014.hex` and `Tut6014.cof` output files. The `.hex` file contains the data necessary to program the device and the `.cof` file contains additional information that lets you debug at the source code level.

Before building, there are settings required to tell MPLAB IDE where to find the include files and to reserve space for the extra debug code when the MPLAB ICD 2 is used.


The following line is near the top of the `Tut6014.s` file:

```
.include "p30f6014.inc"
```

This line causes a standard include file to be used. Microchip provides these files with all the Special Function Register (SFR) labels already defined for convenience.

To build the code, select *Build Options>Project* from the *Project>* menu. The Build Options dialog displays, as shown in Figure 2-7.

FIGURE 2-7: BUILD OPTIONS

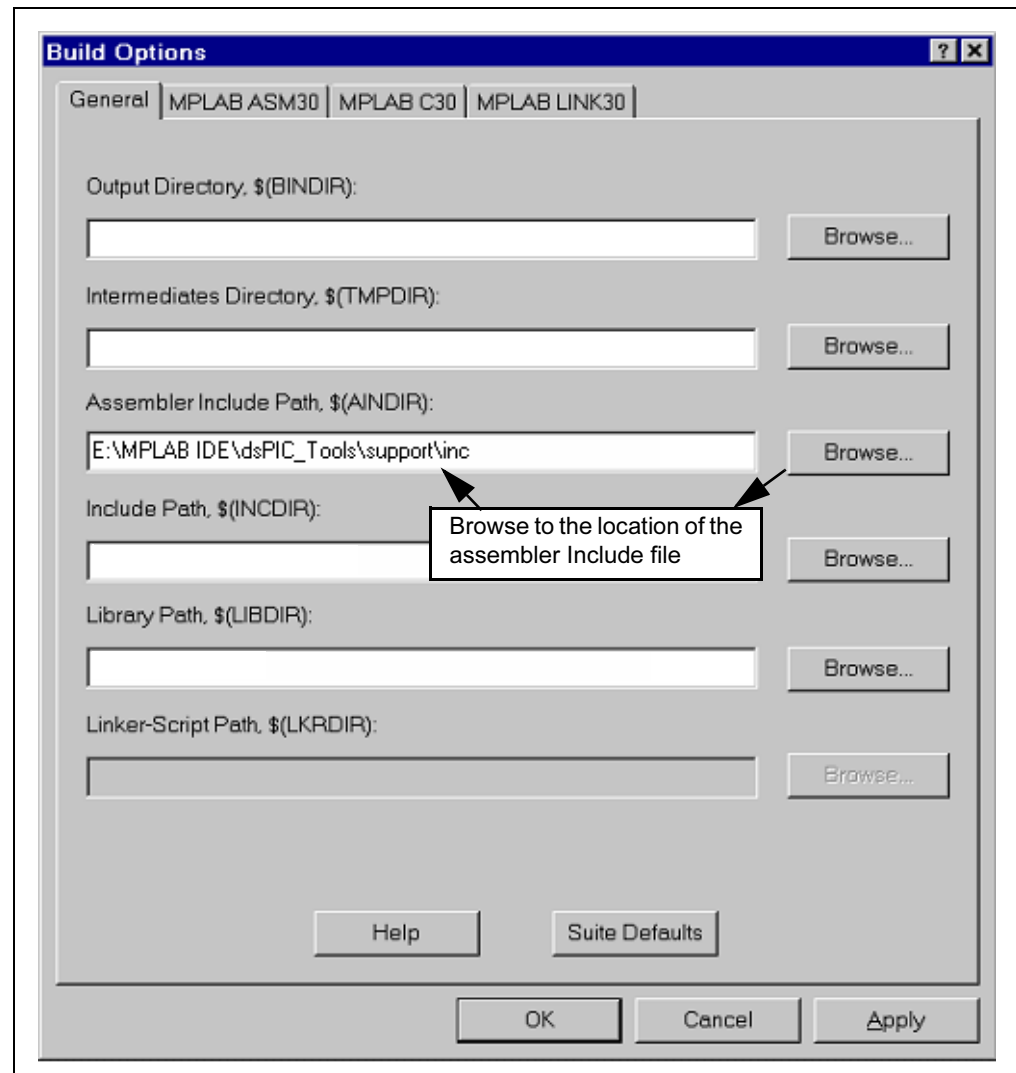

2.5.1 Identify Assembler Include Path

1. Select the General tab.
2. At the **Assembler Include Path**, **\$(AINDIR)** box, click **Browse...** and navigate to:


E:\MPLAB IDE\dsPIC_Tools\support\inc

This path tells MPLAB IDE where to find the Include files.

2.5.2 Link for ICD 2

1. Select the MPLAB LINK30 tab to view the linker settings (see Figure 2-8).
2. Check **Link for ICD 2**.
3. Click **OK**. The text box closes while the linker reserves space for the debug code used by the MPLAB ICD 2.
4. Click **OK** again to save these changes. The project is now ready to build.


FIGURE 2-8: MPLAB LINK30 BUILD OPTIONS

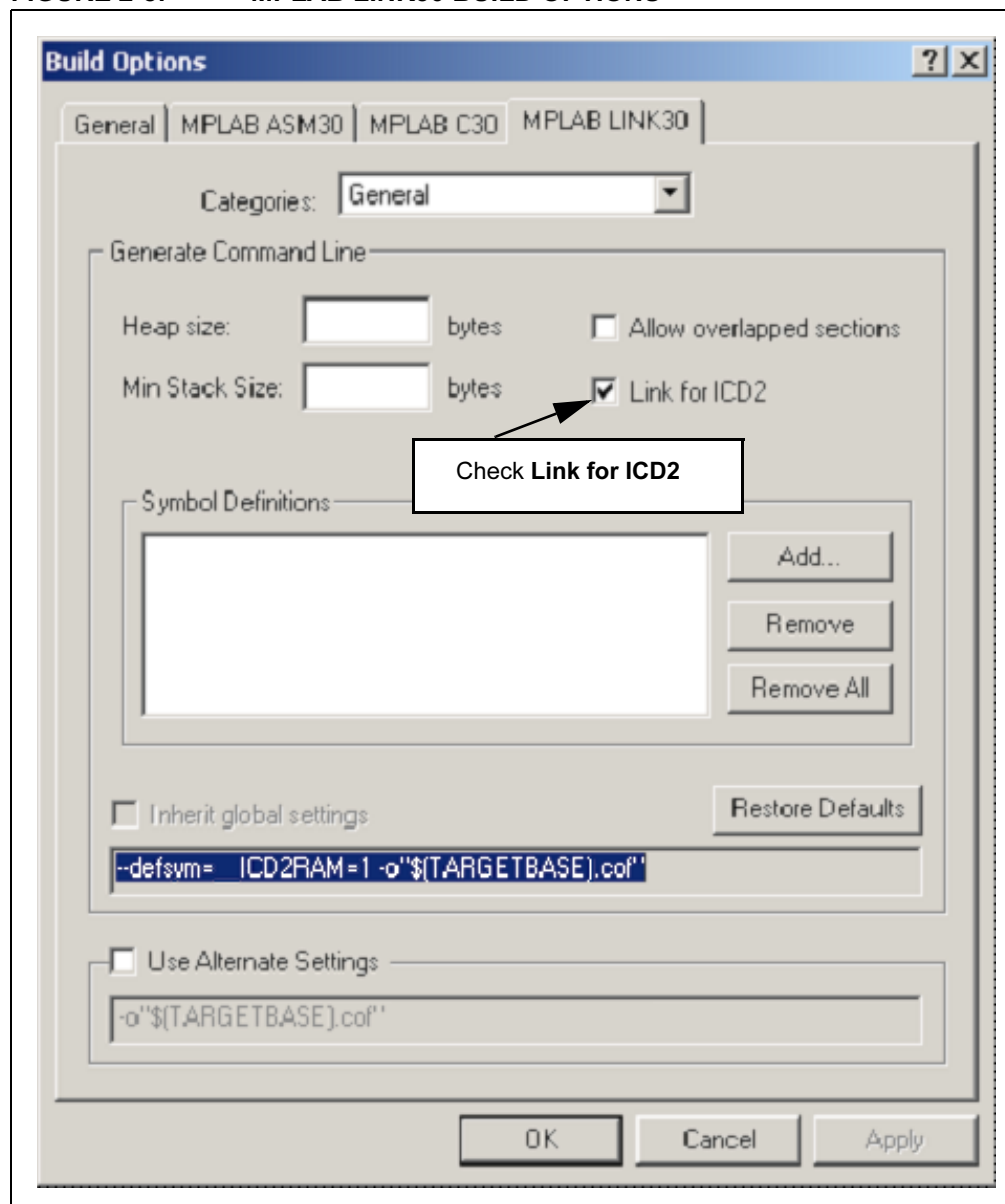

2.5.3 Build the Project

1. Select Make>Project menu to display the Build Output window (Figure 2-9).
2. Observe the progress of the build.
3. When BUILD SUCCEEDED displays you are ready to program the device.

FIGURE 2-9: BUILD OUTPUT WINDOW

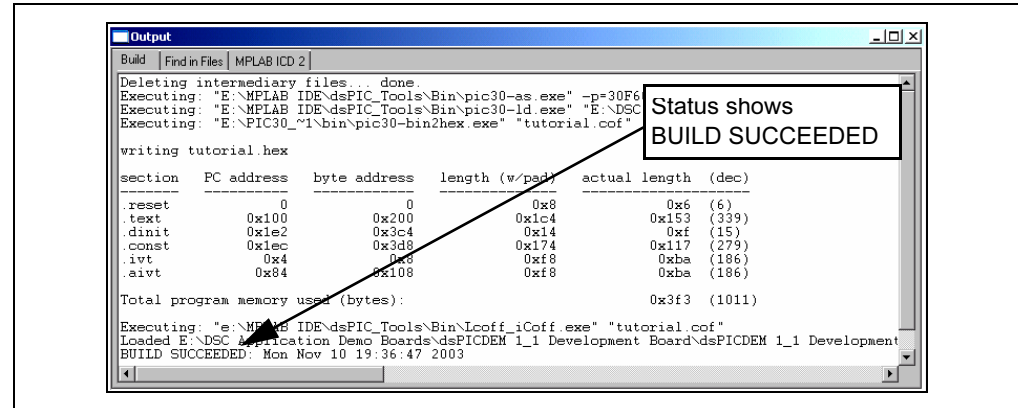

2.6 PROGRAMMING THE CHIP

The MPLAB ICD 2 In-Circuit Debugger can be used to program and debug the dsPIC30F6014 device in-circuit on the dsPICDEM 1.1 Development Board.


Note: Before proceeding, make sure that the USB driver for the MPLAB ICD 2 has been installed on your PC (see the *MPLAB ICD 2 User's Guide*, DS51331) for more details regarding the installation of MPLAB ICD 2.

Use the following procedures to program the dsPIC30F6014 device.

2.6.1 Set Up the Device Configuration

1. Use the Configure>Configuration Bits menu to display the configuration settings.
2. Set up the configuration bits as shown in Figure 2-10.

FIGURE 2-10: CONFIGURATION SETTINGS

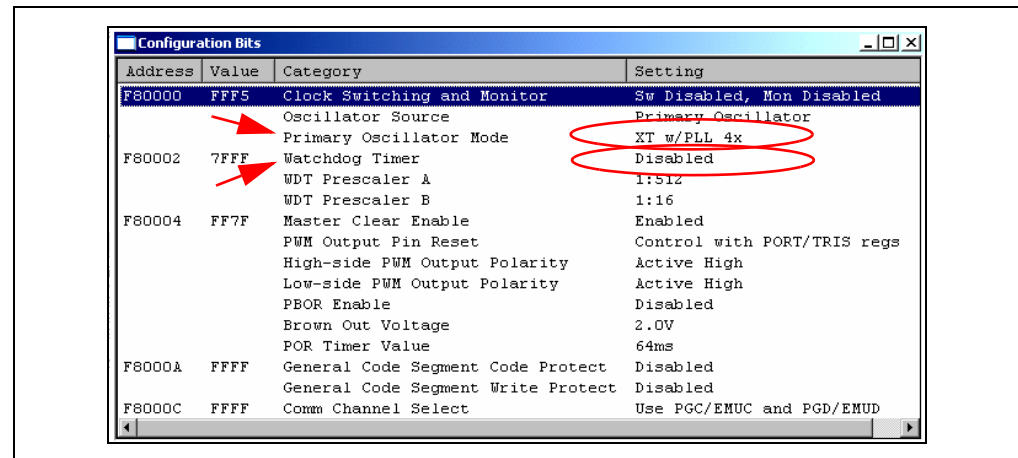


The highlighted configuration settings may need to change to the these values:

Primary Oscillator Mode: XT w/PLL 4x
 Watchdog Timer: Disabled

2.6.2 Connect the MPLAB ICD 2 In-Circuit Debugger

1. Before setting up the hardware, check that the following jumpers are in place:
AVDD_JMP: On
J8: PGD/EMUD, PGC/EMUC
J10: MCLR1
VDD_JMP: On
2. Connect the MPLAB ICD 2 to the PC with the USB cable (see Figure 2-11).
3. Connect the MPLAB ICD 2 to the dsPICDEM 1.1 Development Board with the short RJ-11 (telephone) cable.
4. Apply power to the board.

FIGURE 2-11: dsPICDEM 1.1 DEVELOPMENT BOARD CONNECTED TO MPLAB ICD 2 IN-CIRCUIT DEBUGGER

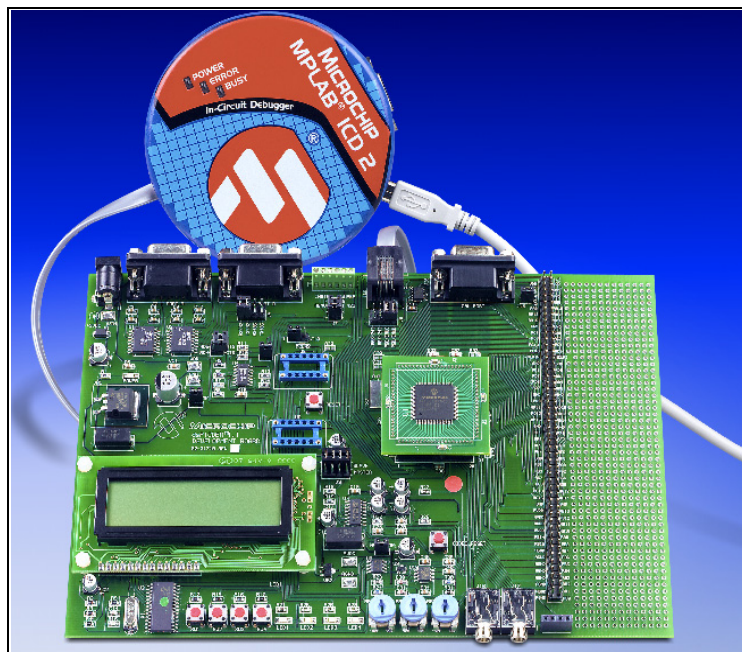


2.6.3 Enable MPLAB ICD 2 Connection

1. From the *Debugger* menu, click *Select Tool>MPLAB ICD 2* to designate the MPLAB ICD 2 as the debug tool in MPLAB IDE.
2. From the *Debugger* menu, select *Connect* to connect the debugger to the device. The MPLAB ICD 2 should report that it found the dsPIC30F6014 device, as shown in Figure 2-12.


Note: MPLAB IDE may need to download new firmware if this is the first time the MPLAB ICD 2 is being used with a dsPIC30F device. Allow it to do so. If any errors are shown, double-click the error message to get more information.

FIGURE 2-12: ENABLING MPLAB ICD 2

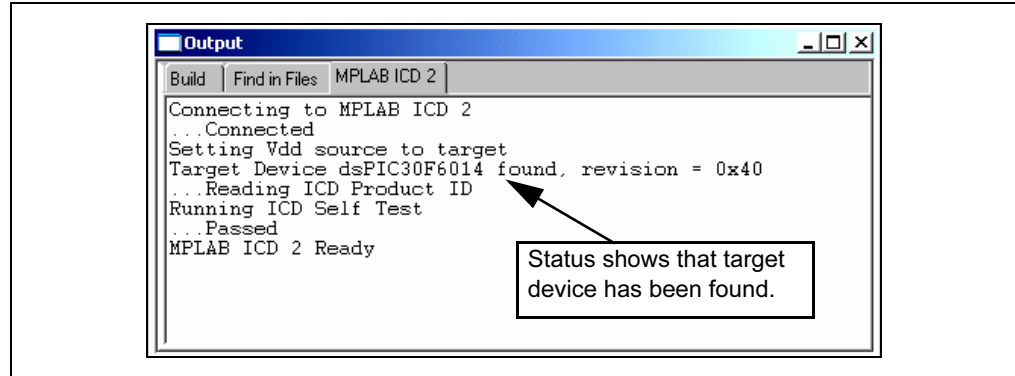

3. From the *Debugger* menu, click *Settings* to display the MPLAB ICD Debugger settings.
4. Select **Allow ICD 2 to select memories and ranges**, as shown in Figure 2-13. This setting will speed up operations by programming only a small part of the total program memory.

FIGURE 2-13: SETTING PROGRAM MEMORY SIZE

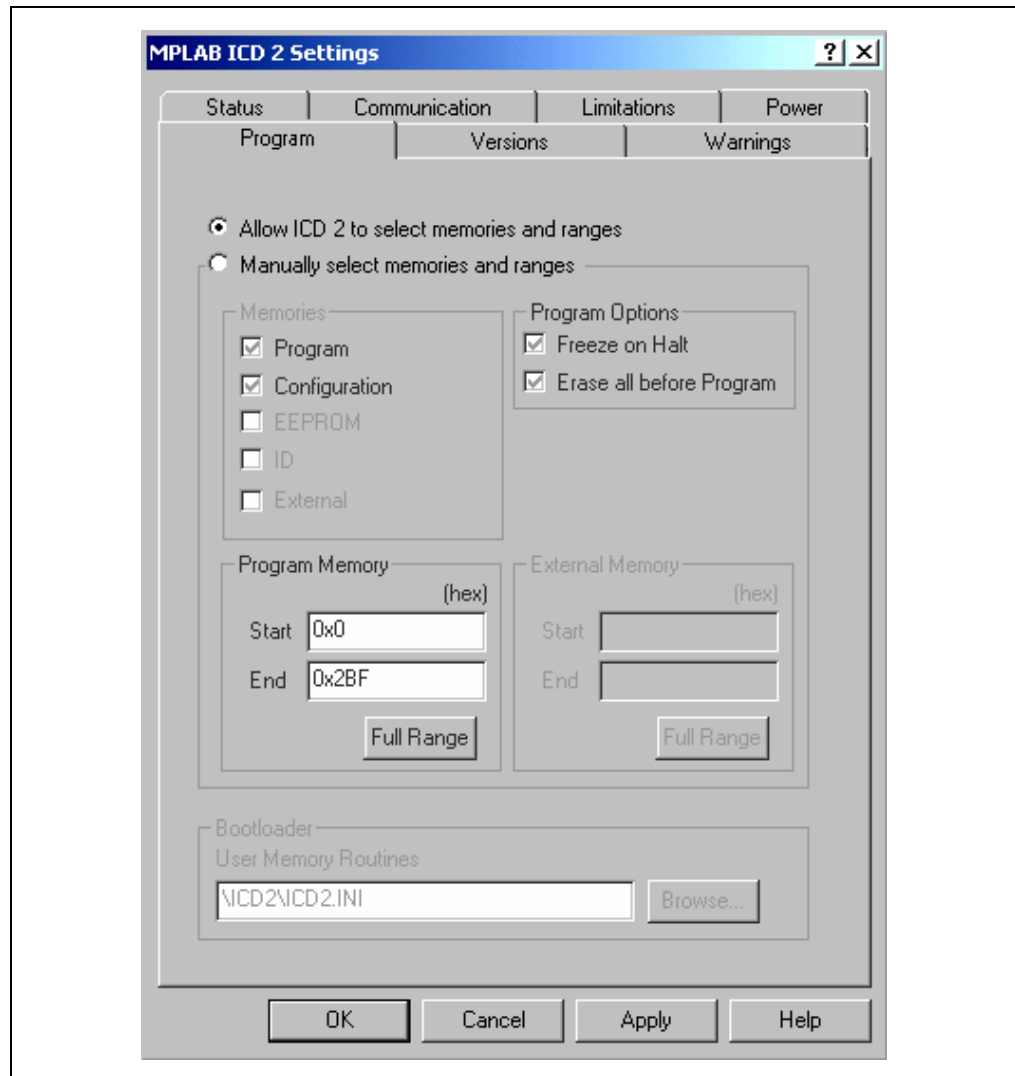


dsPICDEM™ 1.1 Development Board User's Guide

2.6.4 Program the dsPIC30F6014 Device

1. From the *Debugger* menu, select *Program*. The Output window (Figure 2-14) displays the program steps as they occur.
2. Observe the process in the Output window. When “MPLAB ICD 2 Ready” displays, the device is programmed and ready to run.

FIGURE 2-14: PROGRAMMING THE dsPIC30F6014 DEVICE

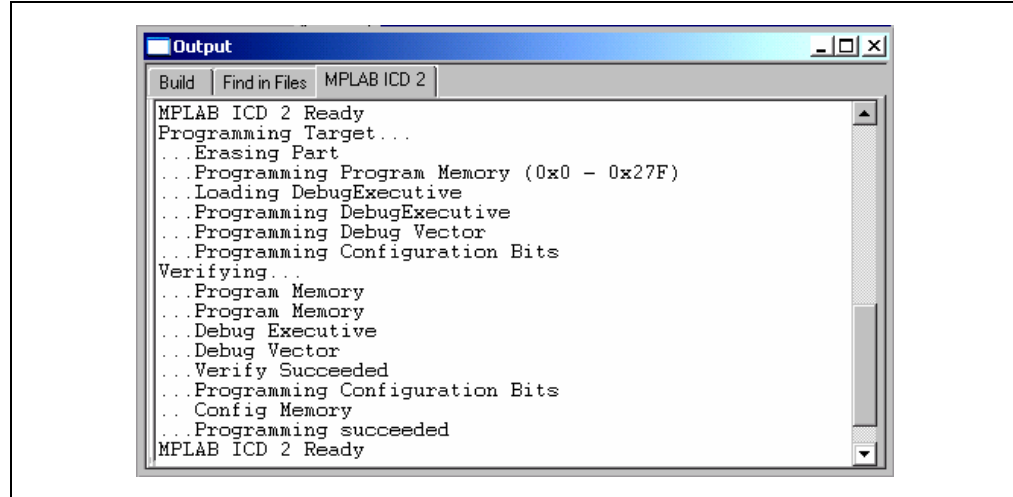

3. Use the *Debugger>Reset* menu to reset the code, then *Debugger>Run* to run the code. LED1 should start blinking and the LCD display should show the text in Figure 2-15.

FIGURE 2-15: TUTORIAL LCD DISPLAY



2.7 DEBUGGING THE CODE

The MPLAB ICD 2 In-Circuit Debugger can be used to run, halt and step the code. A breakpoint can be set to halt the program after the code has executed the instruction at the breakpoint. The contents of the RAM and registers can be viewed whenever the processor has been halted.

The MPLAB ICD 2 In-Circuit Debugger uses the following function keys to access the main debugging functions:


- <F5> Halt
- <F6> Reset
- <F7> Single Step
- <F9> Run

In addition, there are more functions available by right clicking on a line of source code. The most important of these are “Set Breakpoint” and “Run to Cursor.”

2.7.1 Display the Code

1. From the View menu, select *Program Memory*.
2. On the Program Memory window, select the **S**ymbolic tab, as shown in Figure 2-16.

FIGURE 2-16: PROGRAM MEMORY WINDOW

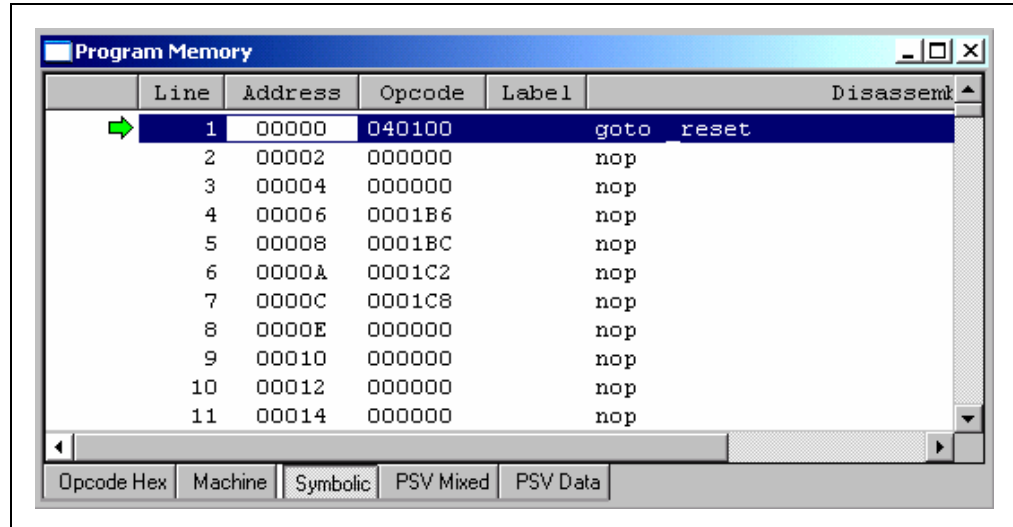

3. Press <F5> to halt the processor and press <F6> to reset. The program memory now shows a green arrow pointing to the line of code at address 0, the reset location.

The instruction at this location is `goto __reset`. This code is added by the linker to make the program branch to the start of the code in the `Tut6014.s` file. The code uses the `__reset` label at the start of the executable code and declares the label as global to have visibility outside the source file (see Example 2-1).

EXAMPLE 2-1: CODE START-UP

```


.global __reset
.text
__reset:      mov    #__SP_init, W15
              mov    #__SPLIM_init, W0
              mov    W0, SPLIM
    
```

The linker also provides values for the `__SP_init` and `__SPLIM_init` constants to initialize the stack pointer (W15), since the linker determines what RAM is available for the stack.

2.7.2 Step the Program


1. Press <F7> to single-step the code. The green arrow now points to the code at `__reset` in the `Tut6014.s` source code as shown in Figure 2-17.
2. Right click the line of code `mov w0,LATD` and choose *Run to Cursor*. The green arrow then points to the line `mov w0,TRISD`, because it has executed the prior lines of code up to and including `mov #0xFFF0,w0`.

FIGURE 2-17: SOURCE CODE WINDOW

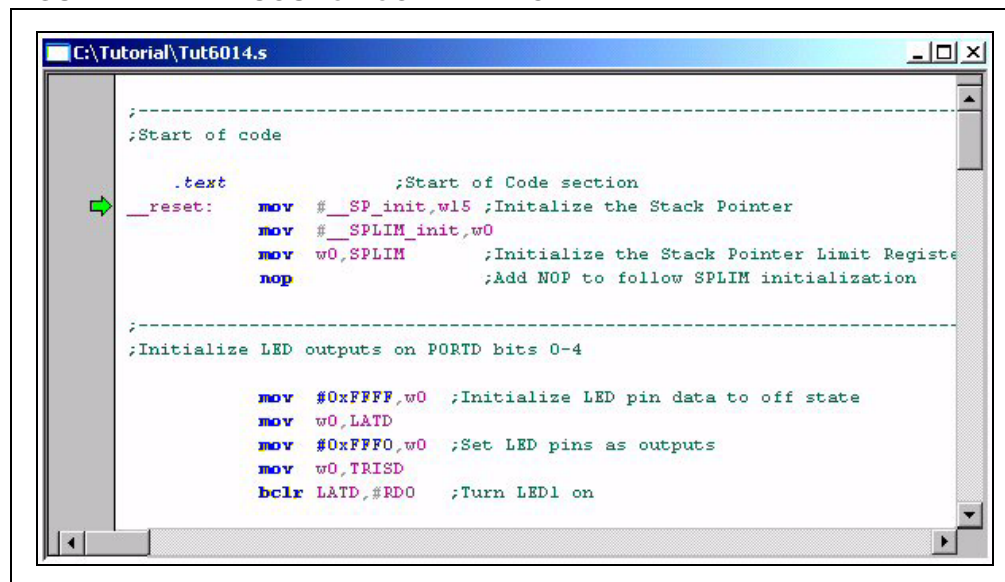

3. From the *View* menu, select *Watch* to open a Watch window (Figure 2-18).
4. From the **Add SFR** pull-down list, display **TRISD**.
5. Click **Add SFR** to add the TRISD register to the Watch window.
6. Next, select **PORTD** from the pull-down list and click **Add SFR**.
7. Press <F7> a few times and watch the values of TRISD and PORTD SFRs change.

FIGURE 2-18: WATCH WINDOW DISPLAY

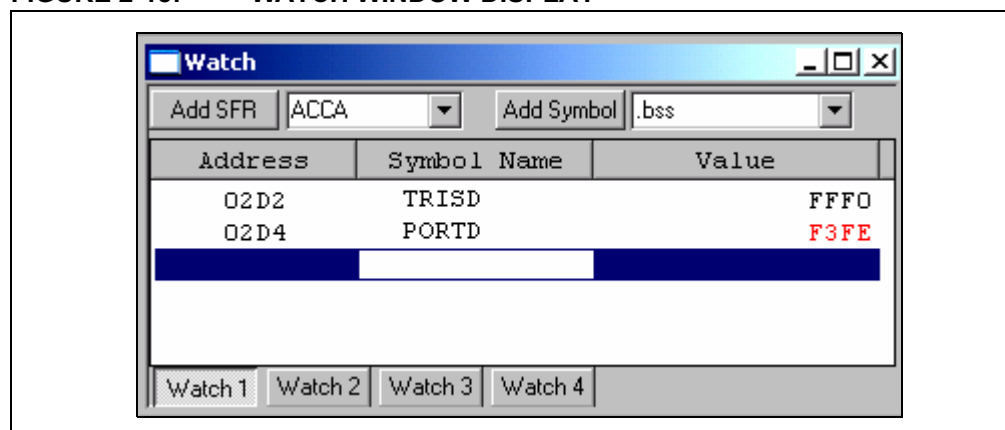

Note: The value displayed for PORTD may be different on your system depending on what load is on PORTD.

2.7.3 Set Breakpoint

1. To set a breakpoint, right-click a code line and select *Set Breakpoint* from the pop-up menu.

Note: An alternate method is to simply double-click the line. This feature may need to be enabled using the *Edit>Properties* menu.

As an example, find the following line of code and set a breakpoint on this line.


```
WrtNextChr: btss flags, #0
```

A red stop sign should appear in the gutter (grey bar on the left) of the source code window.

2. Press <F9> to run the code. The program halts on the instruction following the breakpoint as shown in Figure 2-19.

Note: The instruction on which the code halts could be elsewhere in the code if the breakpoint was set on or immediately after a branch instruction. Refer to Section 12, "Important Notes", in the Readme file for the MPLAB ICD 2.txt file located in the E:\MPLAB IDE\READMEs directory for additional operational information.

FIGURE 2-19: SETTING BREAKPOINT

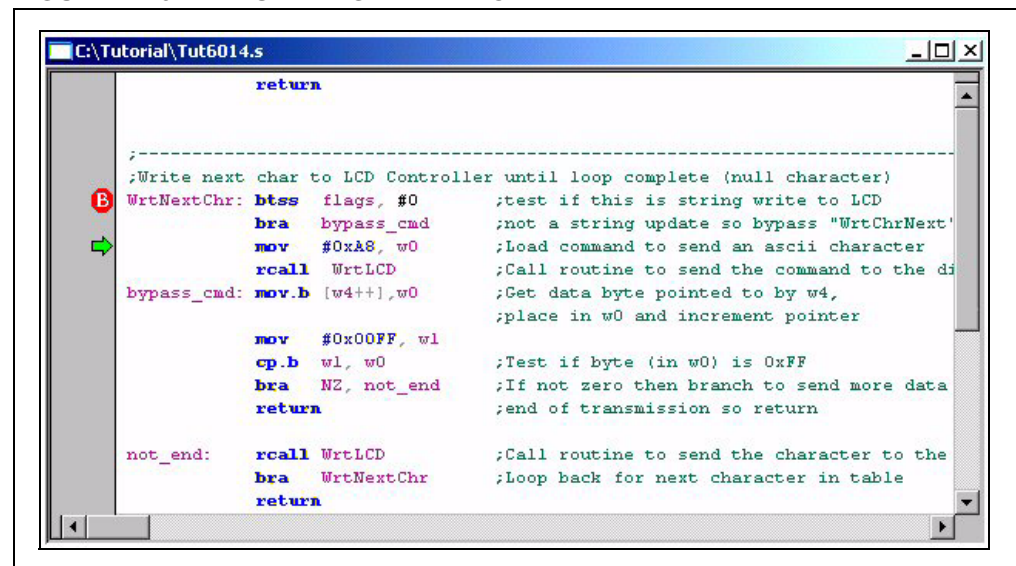

In this example, every time <F9> is pressed to run the code it sends one character to the display and stops at the breakpoint. After the first four spaces, the characters will start to appear on the LCD display.

2.8 SUMMARY

This tutorial demonstrates the main features of the MPLAB IDE and the MPLAB ICD 2 as they are used with the dsPICDEM 1.1 Development Board. Upon completing this tutorial, you should be able to:

- Create a project using the Project Wizard.
- Assemble and link the code and set the configuration bits.
- Set up MPLAB IDE to use the MPLAB ICD 2 In-Circuit Debugger.
- Program the chip with the MPLAB ICD 2.
- View the code execution in program memory and source code.
- View registers in a Watch window.
- Set a breakpoint and make the code halt at a chosen location.
- Use the function keys to Reset, Run, Halt and Single-Step the code.

Chapter 3. Demonstration Program Operation

3.1 INTRODUCTION

The dsPICDEM 1.1 Development Board is shipped with an example program coded into the dsPIC device. The example program exercises several of the dsPIC30F peripherals, such as the 12-bit ADC and Codec interface and several of the unique CPU features. This chapter discusses these examples and explains the functionality they demonstrate. For detailed information on the dsPICDEM 1.1 Development Board hardware, refer to Section 4.

3.2 HIGHLIGHTS

Items discussed in this chapter are:

- Demonstration Program Operation
- Data and Control Flow
- dsPIC30F Demonstration Performance Metrics
- Board Self-Test Code Module Summary

3.3 DEMONSTRATION PROGRAM OPERATION

The dsPIC30F device included with your dsPICDEM 1.1 Development Board is programmed to automatically initiate the demonstration code when power is applied to the board. This code is divided into two separate modules:


- Demonstration code module
- Board self-test code module

This chapter is mostly devoted to describing the demonstration program. The end of the chapter includes a brief summary of the board self-test code module, which has been included on the CD as a library archive only. See **Section 3.6 “Board Self-Test Code Module Summary”**.

3.3.1 Demonstration Code Module Summary


When power is applied to the dsPICDEM 1.1 Development Board, the LCD displays the Demo Main Menu, as shown in Figure 3-1.

FIGURE 3-1: POWER-UP DISPLAY

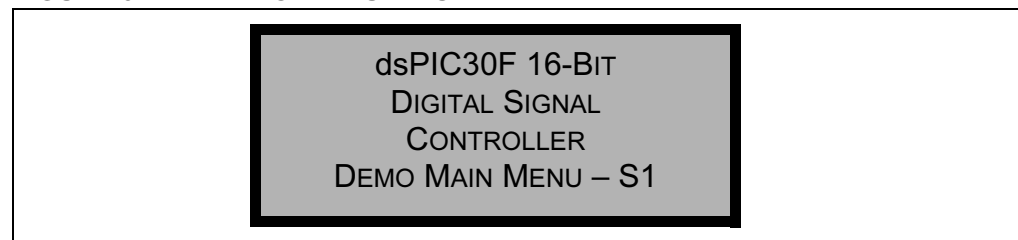

From this menu, pressing switch SW1 displays the menu options for the demonstration program, as shown in Figure 3-2.

FIGURE 3-2: DEMO MENU OPTIONS

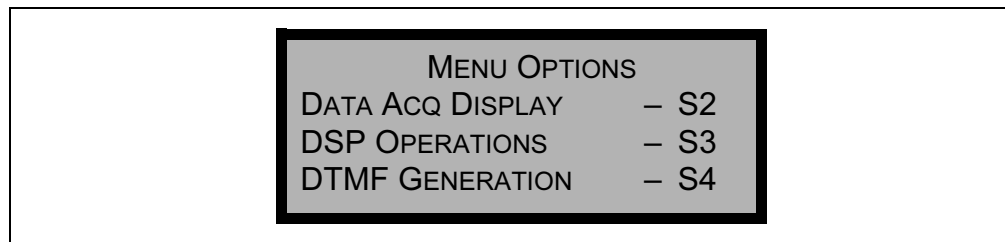

From this menu you can choose one of three demonstration modes:


- Data Acquisition Display mode
- Digital Signal Processing (DSP) Operations mode
- Dual Tone Multi-Frequency (DTMF) Generation mode

3.3.1.1 DATA ACQUISITION DISPLAY MODE

The Data Acquisition Display mode demonstrates the capability of the dsPIC30F device to convert inputs from five different analog signal sources at varying sampling rates.

Data Acquisition mode is initiated by pressing switch SW2. Figure 3-3 shows the resulting display on the LCD.

FIGURE 3-3: DATA ACQUISITION DISPLAY

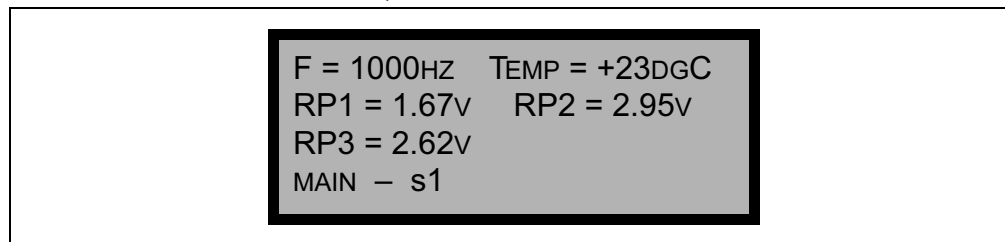

This display shows the values of the following analog signal sources:

- Potentiometers RP1-RP3
The three potentiometers available on the dsPICDEM 1.1 Development Board, RP1, RP2 and RP3, are connected to analog input pins AN6, AN4 and AN5, respectively, on the dsPIC30F device.
- Temperature Sensor U2:
Temperature sensor, TC1047A, is connected to the analog input pin, AN8, on the dsPIC30F device.
- Frequency:
A fundamental sinewave signal is generated by stepping the MCP41010 digital potentiometer (U9) output at an 8 kHz rate. The analyzed frequency is displayed on the LCD.

The 12-bit A/D converter on the dsPIC30F device is used to convert these analog input sources.


To estimate the frequency of the generated sine-wave signal, the program converts and buffers 256 samples of the signal on pin AN3 and then performs a Fast-Fourier Transform (FFT) on the buffer. The A/D converter is interrupt driven to sample and convert at an 8 kHz rate for this operation.

The program scans input pins AN4, AN5, AN6 and AN8 to sample and convert the values of the temperature sensor and potentiometer signals and delivers one sample of each of these signals to the LCD display.

Demonstration Program Operation


You can also display the data acquisition values on the communications HyperTerminal on your PC. Use a DB-9 cable to connect “J2 – PORT A” on the development board to the RS-232 serial port on the PC, as shown in Figure 3-4.

FIGURE 3-4: dsPICDEM™ 1.1 DEVELOPMENT BOARD TO PC CONNECTION

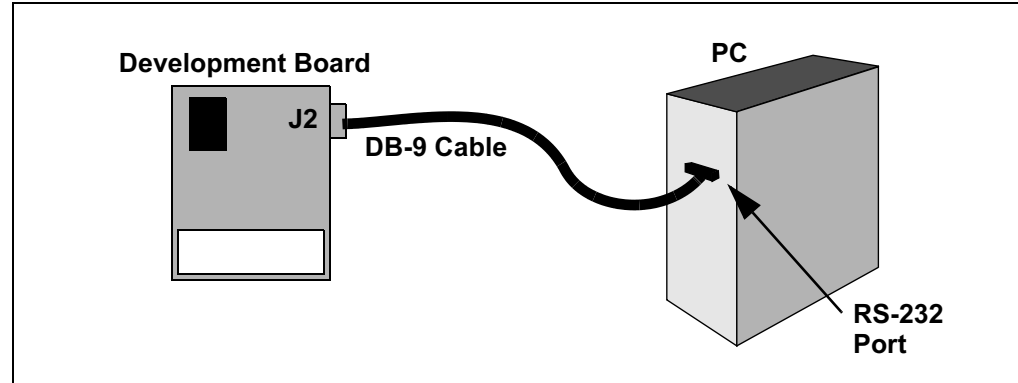

After connecting the cable, configure HyperTerminal for the port settings shown in Figure 3-5. HyperTerminal will show a composite display of the data acquisition values at an update rate of 1.14 seconds.

FIGURE 3-5: HYPERTERMINAL CONFIGURATION SETTINGS

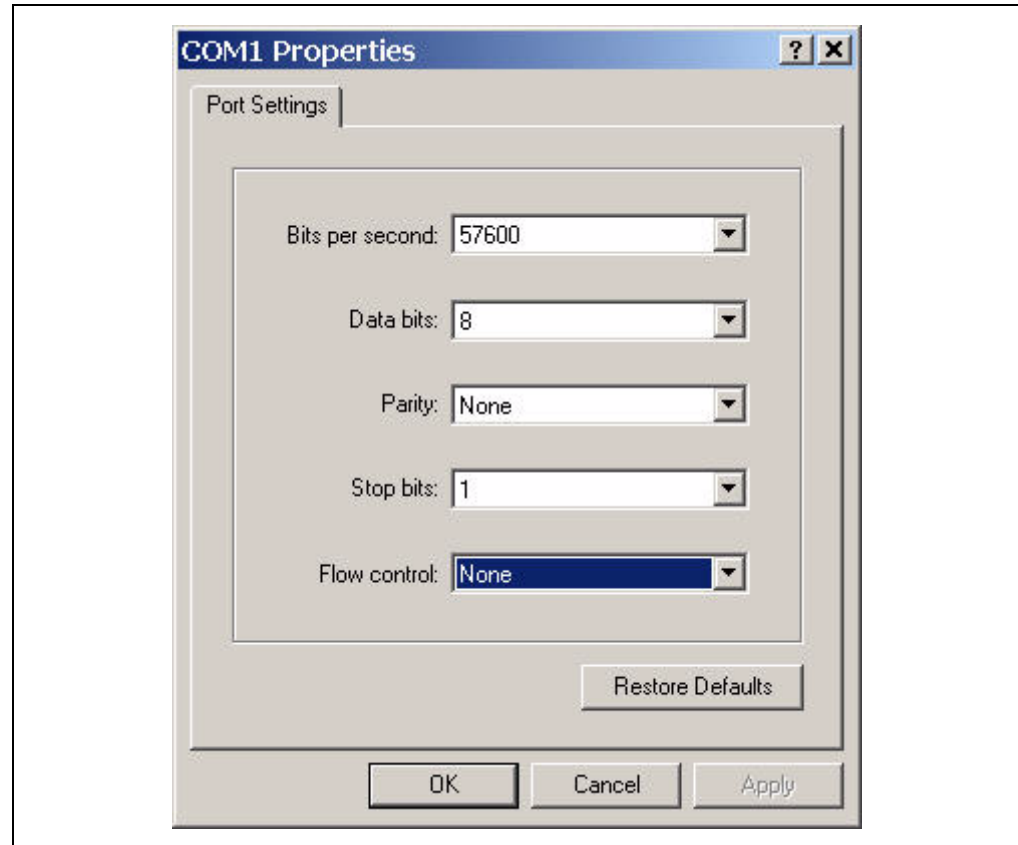


To return to the Menu Options display after running the Data Acquisition demo, press switch SW1.

dsPICDEM™ 1.1 Development Board User's Guide

3.3.1.2 DSP OPERATIONS MODE

From the Menu Options display, pressing switch SW3 launches the DSP Operations demo, which displays the digital signal values shown in Figure 3-6. This display provides information on the various signal-processing operations that are performed on the signal at analog input pin, AN3.

FIGURE 3-6: DSP OPERATIONS DISPLAY

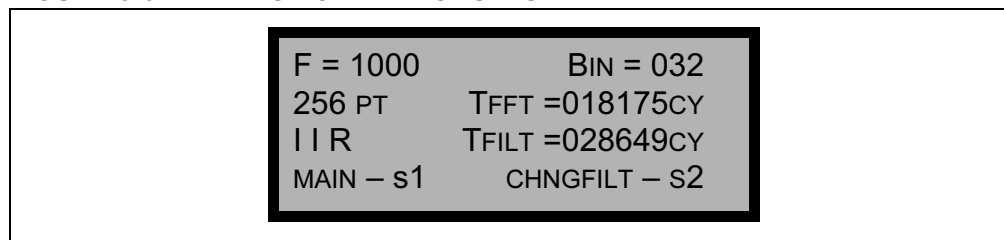

The DSP operations display shows several parameters for a sampled sinewave signal. A fundamental sinewave signal is generated by stepping the MCP41010 digital potentiometer (U9) output at an 8 kHz rate. The output of the digital potentiometer is applied to a low-pass (LP) filter with a cutoff frequency of approximately 4 kHz. This LP filter removes the high-frequency components and yields a sinewave adequate for this demonstration. Five frequencies are developed and selected by varying potentiometer RP1, as shown in Table 3-1.

TABLE 3-1: FREQUENCIES VS. POTENTIOMETER SETTING

Potentiometer Setting	Resulting Frequency
$0 \leq RP1 \leq 1V$	100 Hz
$1 \leq RP1 \leq 2V$	500 Hz
$2 \leq RP1 \leq 3V$	1000 Hz
$3 \leq RP1 \leq 4V$	1500 Hz
$4 \leq RP1 \leq 5V$	2000 Hz

The filtered output of the MCP41010 is routed to pin AN3/RB3, which is an input to the dsPIC30F 12-bit A/D converter. The A/D converter collects 256 samples from the MCP41010 at an 8 kHz sample rate. These samples are optionally subjected to a digital filtering algorithm implemented on the dsPIC30F. The following three digital filtering options are provided and selected by switch SW2:

- None
- Infinite Impulse Response (IIR)
- Finite Impulse Response (FIR)

Subsequently, their spectral components are estimated. The frequency estimate of the signal on pin AN3/RB3 is displayed on the first row of the DSP Operations display.

Demonstration Program Operation

Figure 3-7 depicts the flow of data from the time the analog input is converted by the dsPIC30F device to the time the frequency is estimated.

FIGURE 3-7: DSP OPERATIONS FLOW DIAGRAM

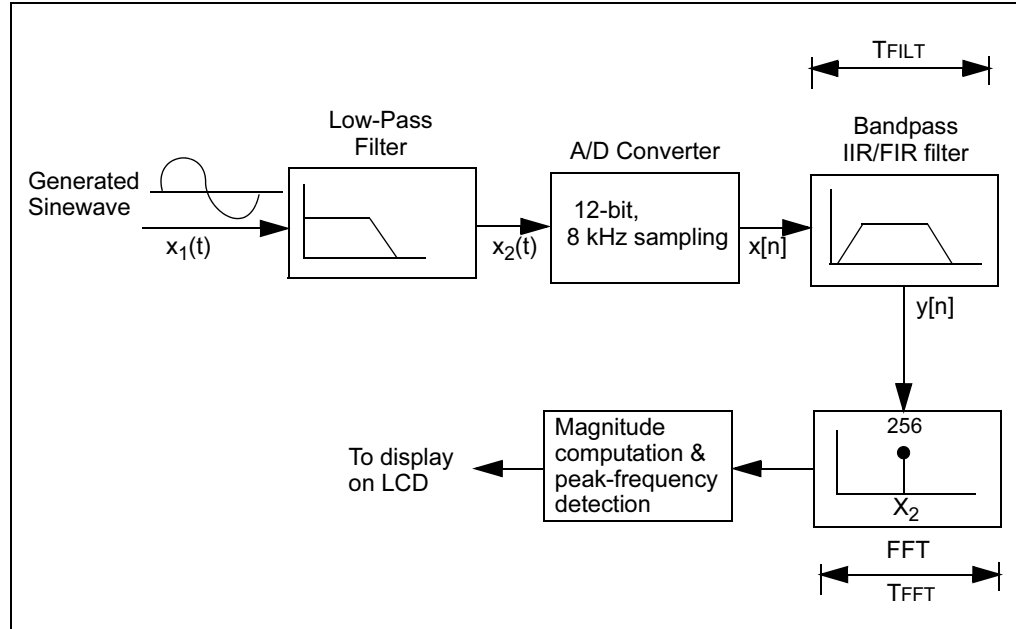


Figure 3-8 shows the frequency response of the IIR filter implemented on the dsPIC30F. The IIR filter is only employed for demonstrating filter operation.

FIGURE 3-8: FREQUENCY RESPONSE: IIR FILTER


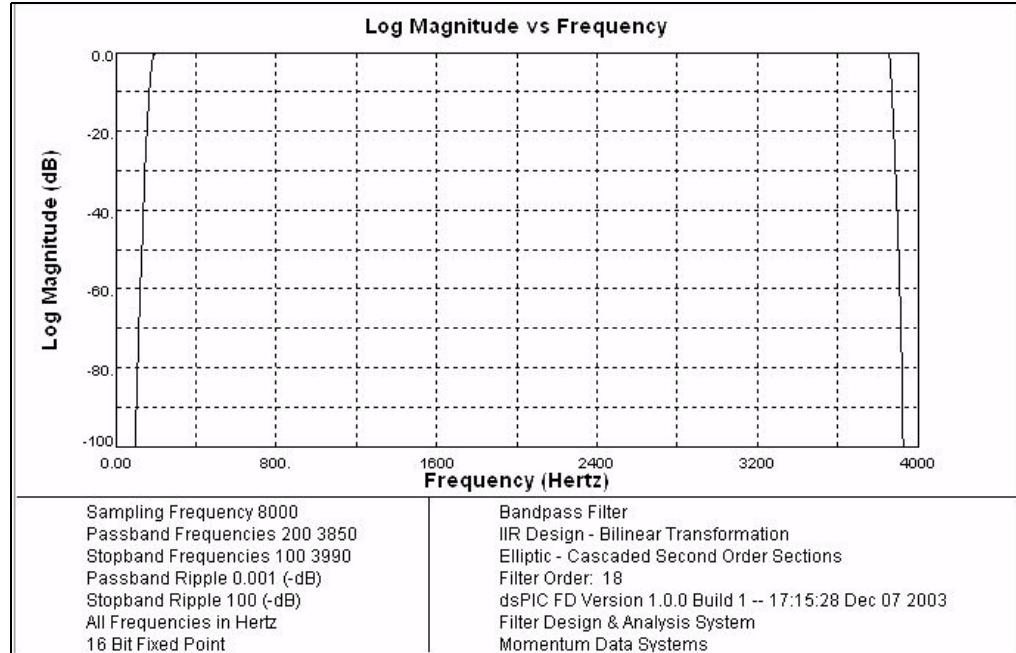


Figure 3-9 shows the frequency response of the FIR filter implemented on the dsPIC30F. The FIR filter is only employed for demonstrating filter operation.

FIGURE 3-9: FREQUENCY RESPONSE: FIR FILTER

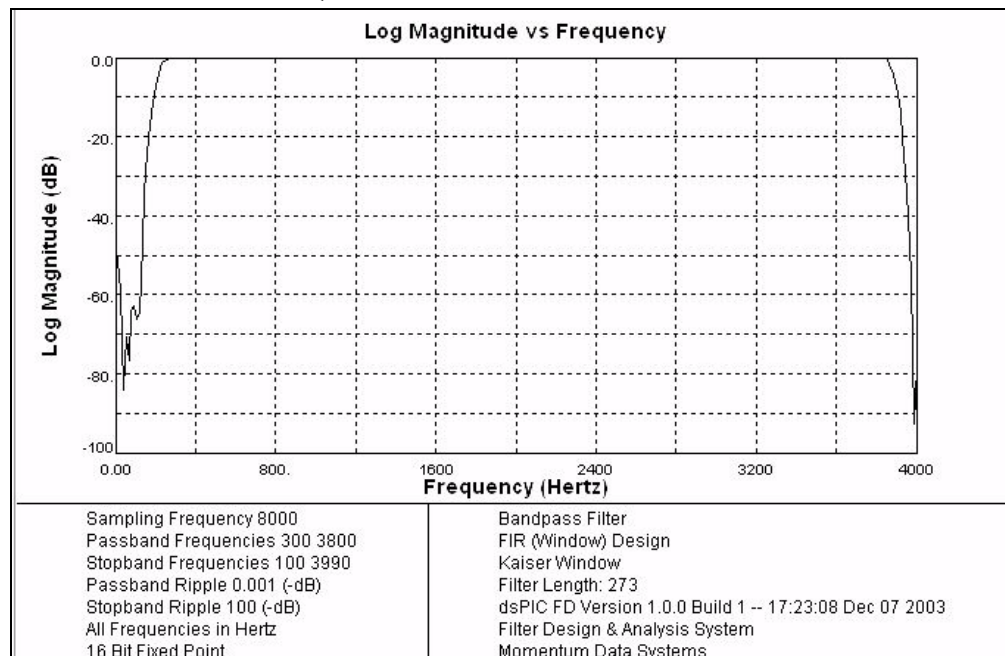


The signal frequency determined by analyzing the 256-point FFT and associated bin is displayed on the LCD. Cycle counts for the digital filters and FFT are displayed on the LCD.

To quit this demonstration and return to the main menu, press switch SW1.

3.3.1.3 DTMF GENERATION MODE

From the Menu Options display, pressing switch SW4 launches the DTMF Generation demo and takes you to the DTMF operation menu (Figure 3-10).

FIGURE 3-10: DTMF TONE GENERATION MENU

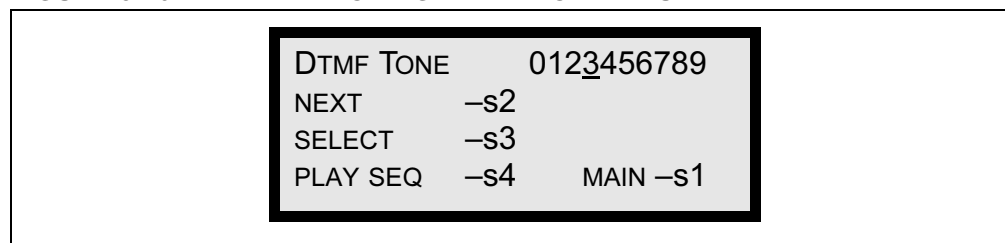

When this display is active, switches SW2-SW4 control tone generation, as shown in Table 3-2.

TABLE 3-2: DTMF TONE GENERATION CONTROLS

Switch	Function
s2	Moves blinking cursor to the next DTMF Tone digit
s3	Plays the DTMF tone associated with the digit selected by s2
s4	Plays a predetermined sequence of ten DTMF tones

Demonstration Program Operation

Each DTMF tone consists of two sinusoids: a high-frequency component and a low-frequency component. In the DTMF tones implemented for this demonstration, the high-frequency component is at a level 8 dB lower than the low-frequency component. You can listen to the generated tones by using either a headset or a passive speaker connected to the “SPKR OUT” jack (J17).

Note: For a passive speaker, use a Radio Shack Model # 40-1434 Fold-up Stereo Speaker System or an equivalent device.

If you connected your PC for the Data Acquisition Display demo (see Section 3.3.1.1), you can use the <0>-<9> keys on the PC keyboard to select a DTMF tone.

To quit this demonstration and return to Menu Options, press switch SW1.

3.3.2 Demonstrated Features and Peripherals

The following two sections summarize the key dsPIC30F MCU, DSP and peripheral features implemented in this general purpose demonstration program.

3.3.2.1 dsPIC30F MCU/DSP FEATURES

The demonstration program uses several unique dsPIC30F MCU/DSP features for various processing functions, including:

- DSP Engine for FFT, FIR and IIR computations
 - 40-bit accumulators with Saturation, Overflow and Rounding modes
 - Multiply-and-Accumulate (MAC) class of DSP instructions
- Bit-Reversed Addressing for 256-point FFT input data in preparation for the FFT “butterfly” computations
- Modulo Addressing for accessing arrays in a circular fashion for FIR filtering
 - Two modulo buffers have been implemented, one each in X and Y data spaces.
- Hardware Loop instructions
 - DO and REPEAT instructions provide minimal overhead when executing a block of instructions repetitively.
- Program Space Visibility (PSV)
 - Large tables for FIR filter coefficients, sine tables etc., are stored in and accessed from program memory.

3.3.2.2 dsPIC30F DEMO PERIPHERALS

The demonstration program also implements several dsPIC30F peripherals for various tasks. These peripherals include:

- Timer1 - Configured as a 16-bit timer
- Timer2 - Configured as 16-bit timer with a 256:1 prescaler
- Timer3 - Configured as 16-bit timer with a 256:1 prescaler
- Timer4 and Timer5 - Configured as a 32-bit timer
- UART2 TX/RX - Used to transmit demo data to the PC and receive commands from the PC keyboard
- SPI 2 - Used to communicate to the 122 x 32 Addressable-Pixel LCD via the PIC18F242 LCD controller and MCP41010 digital potentiometer
- 12-bit ADC - Used to convert multiple analog signals, including temperature and sinewave signals generated by the MCP41010 digital potentiometer through a low-pass filter

dsPICDEM™ 1.1 Development Board User's Guide

- Data Converter Interface - Interfaced to an external Si3000 voice-band Codec for transmission of DTMF PCM signals
- INTx pins - Used for detecting switch SW1-SW4 inputs
- Hierarchical/Prioritized Interrupt Control with nesting enabled

3.4 DATA AND CONTROL FLOW

3.4.1 Power-up Sequence

The power-up peripheral initialization sequence is shown in Table 3-3.

TABLE 3-3: POWER-UP PERIPHERAL INITIALIZATION SEQUENCE

Seq	Module or Function	Initialization Process
1	Timer1	Configured to count to 125 μ S, but not enabled.
2	Timer2	Configured to count to 1 second using a 256:1 prescaler setting.
3	Timer3	Configured to count up to 1.14 seconds using the 256:1 prescaler setting.
4	Timer4 & Timer5	Configured to operate in the 32-bit Timer mode, but not enabled until needed.
5	Interrupt Service Routine (ISR)	Processing is enabled for Timer2 and Timer3.
6	UART2	Both the transmitter and receiver are configured for interrupt-driven operation at 57600 baud.
7	SPI 2	Initially configured to operate in an interrupt-driven mode at $F_{CY}/8$ Hz (where $F_{CY} = 7.3728$ MHz). The module communicates at $F_{CY}/8$ Hz in 8-bit mode while displaying results on the LCD controller. When it is used to step the MCP41010, it operates in the 16-bit mode at $F_{CY}/32$ Hz.
8	Data Converter Interface (DCI)	Configured for Master mode. Initially configured to use two of four buffers. Transmits/receives in time slot 1 at the frame rate of 7200 Hz for configuring the Si3000 external voice-band Codec.
9	Si3000	Configured for Slave mode. The Si3000 line and speaker ports are enabled. Signal attenuation is set to 0 dB. The ADC input from the Si3000 is attenuated by 34.5 dB and is not used in this demo.
10	DCI	Re-initialized to operate with all four buffers in interrupt-driven mode for transmitting DTMF PCM words to the Si3000 Codec.
11	External interrupt pins INT1-INT4	Configured to interrupt on the falling edge and used for switches SW1-SW4, respectively.
12	12-bit ADC	Configured to operate at 8000 Hz sampling rate and generate an interrupt every 16 sample-convert sequences. The ADC samples channel AN3 (sinewave), AN4 (RP2), AN5 (RP3), AN6 (RP1) and AN8 (temperature sensor U9).
13	Interrupts	Peripheral interrupts are configured. Nested interrupts are enabled.

Demonstration Program Operation

3.4.2 Main Loop Code Execution

The step-by-step Main Loop execution sequence is shown in Table 3-4.

TABLE 3-4: MAIN LOOP CODE EXECUTION SEQUENCE

Seq	Program Task
1	12-bit ADC collects 256 samples from the digital potentiometer output on AN3 into a RAM buffer.
2	Buffered data set is filtered using an IIR filter to remove line noise. The filter can be changed to an FIR filter or no filter from the DSP menu options. The filtering operation is benchmarked using the Timer4/5 pair.
3	A complex in-place 256-point FFT is performed on the filtered data set, resulting in complex frequency data ($x + jy$). This operation is benchmarked using the Timer4/5 pair.
4	Squared magnitude is computed for each frequency bin in an in-place fashion ($x^2 + y^2$).
5	The magnitude data is run through a routine that returns the frequency bin and magnitude of the largest element.
6	The magnitude of the largest element is compared against a threshold and captured if it is greater than the threshold so that low-level noise does not show up as a frequency estimate. (Provides a simplified peak-detection algorithm.)
7	The ADC settings are changed to sample pins AN4 (RP2), AN5 (RP3), AN6 (RP1) and AN8 (temperature sensor U9). One sample of each is recorded and the ADC is reconfigured for the initial settings.
8	If a Timer3 count has expired, a software flag is set to inform the CPU that the results recorded may now be displayed. This ensures that the CPU refreshes the display buffers.
9	Any user choices entered via the switches SW1-SW4 are checked and the new user selections are applied. May involve a change of display screen or some parameter displayed on the LCD.
10	The changes are communicated to the PIC18F242 LCD controller via the SPI 2 module.
11	In the special case of the DTMF menu, the main routine may also kick off the DCI module operation when the user requests DTMF tone generation.

3.4.3 Interrupts Used in the Demo

3.4.3.1 EXTERNAL INTERRUPTS TO MAIN ROUTINE

External interrupts INT1-INT4 are controlled by switches SW1-SW4.

These switches provide selection capabilities for the demo program. The most recent switch presses are recorded in a variable within the interrupt routines. In the main routine, the variable is analyzed to determine what action is requested by the recent switch event.

3.4.3.2 DCI INTERRUPTS AND DTMF

The DCI module interrupts the CPU when all four TXBUF registers have been transmitted. The DCI is used to send out DTMF tones to the Codec. The tonal components are stored as sinusoid tables in program memory and accessed using Program Space Visibility (PSV).

The DCI ISR keeps track of the number of samples sent. The DTMF tones are transmitted by adhering to International Telecommunication Union (ITU-T) specifications. For example, the ON time for tones is greater than 40 mS and the OFF time is less than 23 mS. The actual values are 100 mS of ON time and 15 mS of OFF time. When playing a pre-recorded sequence of tones, a PAUSE time is added between successive tones. This time is equal to the ON time of the tone. Also, the high and low frequency of the DTMF tone are separated by 8 dB. The high frequencies are reduced in magnitude relative to the low frequencies by 8 dB.

3.4.3.3 UART RECEIVE INTERRUPTS

Single DTMF tones may also be played by entering numeric characters (0-9) on the PC keyboard during the HyperTerminal session. The UART receives this keyboard character, and a receiver interrupt communicates this data to the DCI to start a tone generation process.

3.4.3.4 UART TRANSMIT INTERRUPTS

Every 1.14 seconds, data is transmitted via the UART to the HyperTerminal session window. Four bytes are loaded at a time in the Transmitter Buffer registers. The term "data" refers to the following:

- Analog data such as RP1, RP2 and RP3
- Temperature sensor data
- FFT frequency and bin number of the sampled input sinewave signal
- Cycle count information for the FFT, FIR or IIR algorithms
- Chosen Filter Type – IIR, FIR or None

3.4.3.5 SPI INTERRUPTS, DIGITAL POT AND THE LCD CONTROLLER

The SPI 2 module is used to perform two functions:

- When the demo code is waiting for the A/D converter to collect 256 samples of data on pin AN3, the SPI 2 module is used by the Timer1 ISR to transmit sine-wave samples to the MCP41010 every 125 microseconds at a data rate of 230 kHz.
- When code execution reaches the DSP stage (i.e., filtering, FFT etc.) the SPI 2 module is used to send data to the PIC18F242 LCD controller on the expansion board at a data rate of 921.6 KHz ($F_{cy}/8$). The LCD has a 4 row x 20-character display. All 80 characters are refreshed by the SPI 2 module.

Demonstration Program Operation

3.4.3.6 TIMER1

Timer1 is a 16-bit timer that uses the instruction cycle as its time-base. It is configured to time out and generate an interrupt every 125 microseconds. The Timer1 Interrupt Service Routine (ISR) loads the SPI 2 buffer with a value from a sine table. The SPI 2 module is then used to transmit the sine sample to digital potentiometer MCP41010. The MCP41010 output is connected to pin AN3/RB3 of the dsPIC30F device.

3.4.3.7 TIMER2

LEDs 1-4 count upward in binary form from 0 through 15. The count rate is controlled by the 16-bit Timer2 module, which expires every second as it is operated in a 256:1 prescale mode, with the instruction cycle being the count interval.

3.4.3.8 TIMER3

The Timer3 count is configured to expire every 1.14 seconds. In the Timer3 ISR, a software flag is used to determine whether data needs to be updated to the PC via the UART2 module. Thus data is not transmitted to the PC all the time so that the data on the HyperTerminal window is legible. Data sent to the LCD, however, is refreshed continuously since it does not have a “scrolling” effect.

3.5 dsPIC30F DEMONSTRATION PERFORMANCE METRICS

The dsPIC30F performance metrics are primarily based upon acquisition and processing of the 256 discrete samples. The discrete samples are acquired by the ADC sampling of a sinewave signal applied to analog channel input AN3.

The sinewave signal is generated as a result of stepping the MCP41010 digital potentiometer at an 8 kHz rate with its output applied to a low-pass filter with a cutoff frequency of approximately 4 kHz.

This acquisition and processing sequence repeats in a continuous loop.

Upon user command via the LCD menu system (or optionally from PC keys <0>-<9>), DTMF tones are generated. During this time additional CPU MIPS are required.

This demonstration was developed for the Development Board that is supplied with a 7.3728 MHz crystal. The dsPIC30F is programmed for the XTx4PLL mode of operation, effectively yielding 7.3728 MIPS. Additional MIPS are not required for this demo but could have been obtained by using the XTx8PLL and XTx16PLL modes of operation yielding 14.7456 and 29.4912 MIPS.

<p>Note: The demo code as supplied has specific timing parameters derived from the 7.3728 MHz crystal with the XTx4PLL mode. Changing the device time base will require modification of several time-specific parameters.</p>
--

dsPICDEM™ 1.1 Development Board User's Guide

Following is a summary of the processing time for each of the main demo functions. The data is based upon a 256-sample size.

- Acquisition of 256 discrete sinewave data points sampled at 8 kHz
 - Total acquisition time = 32 mS (256/8000)
- FIR filtering – 72,734 instruction cycles for block processing 256 samples in a 273-tap band-pass filter
 - 9.87 mS @ 7.3728 MIPS
- IIR filtering – 28,649 instruction cycles for block processing 256 samples in a 9-section bi-quad bandpass filter
 - 3.89 mS @ 7.3728 MIPS
- 256-point complex FFT – 18,176 instruction cycles
 - 2.47 mS @ 7.3728 MIPS

Note: Filtering and FFT operations may be interrupted by the DCI, Timer2 or UART2 modules. The time metrics presented above account for the interrupt handler processing time from these interrupts.

- The interrupt-driven UART2 transmitter is triggered every 1.14 seconds by Timer3 to send out approximately 145 characters.
 - At 57600 baud, transmission of 145 characters requires approximately 25 mS
- SPI 2 transmits 160 characters (80 control and 80 data) @ Fcy/8 Hz (where Fcy = 7.3728 MHz) to the PIC18F242 LCD controller for LCD screen updates.

3.5.1 Performance Metric Summary with FIR Filter

The overall CPU performance metric is calculated on how many complete processing cycles can be performed over a 1 second interval. In one second, the dsPIC30F spends the following amounts of time in each of the three major functions:

- FFT Computation:
 - 22.55 x 256-point complex FFTs = 55.69 mS
- FIR Filter Computation:
 - 22.55 x 273-tap FIR filters = 223 mS
 - Coefficients stored in program memory
- CPU Idle:
 - Waiting for ADC data = 721 mS

The 22.55 multiplier used in the above computations is based upon how many times in one second 256 samples can be acquired and then processed by the FIR and FFT algorithms.

For example:

- 32 mS for acquisition of 256 samples
- 9.87 mS for FIR filtering
- 2.47 mS for 256-point FFT

Adding these three major timing metrics results in 44.34 mS. Therefore, this 44.34 mS cycle is repeated 22.55 times in a 1 second interval.

Total MIPS required = 2.1 MIPS out of available 7.3728 MIPS.

FIR filter specifications are listed in Table 3-5.

Demonstration Program Operation

TABLE 3-5: FIR FILTER SPECIFICATIONS

Specification	Value
FIR filter type	BandPass Kaiser Window - 273 coefficients
Passband ripple	0.001 dB
Stopband ripple	100 dB
Passband cutoff frequencies	300 Hz and 3800 Hz
Stopband cutoff frequencies	100 Hz and 3990 Hz
Sampling frequency	8000 Hz

The filter coefficients and code were generated by the Digital Filter Design Tool.

3.5.2 Performance Metric Summary with IIR Filter

The following overall CPU performance metric is calculated on how many complete processing cycles can be performed over a 1-second interval.

- FFT Computation:
 - 26 x 256-point complex FFTs = 64.2 mS
- IIR Filter Computation:
 - 26 x 9 second-order elliptic section IIR filters = 101 mS
Coefficients stored in program memory
- CPU Idle:
 - Waiting for ADC data = 834 mS

The 26 multiplier used in the above computations is based upon how many times in one second 256 samples can be acquired and then processed by the IIR and FFT algorithms.

For example:

- 32 mS for acquisition of 256 samples
 - 3.89 mS for IIR filtering
 - 2.47 mS for 256-point FFT
- Adding these three major timing metrics results in 38.3 mS. Therefore, this 38.3 mS cycle is repeated approximately 26 times in a 1 second interval.
Total MIPS required = 1.22 MIPS out of available 7.3728 MIPS.

IIR filter specifications are listed in Table 3-6.

TABLE 3-6: IIR FILTER SPECIFICATIONS

Specification	Value
IIR filter type	Bandpass, Elliptic, 9 Second Order Sections
Passband ripple	0.001 dB
Stopband ripple	100 dB
Passband cutoff frequencies	200 Hz and 3850 Hz
Stopband cutoff frequencies	100 Hz and 3990 Hz
Sampling frequency	8000 Hz

The filter coefficients and code were generated by the Digital Filter Design Tool.

3.6 BOARD SELF-TEST CODE MODULE SUMMARY

The Board Self-test Code module can be used to check that peripheral elements used by the main demonstration program are operating correctly.

To run this code module:

1. Apply power to the dsPICDEM 1.1 Development Board,
2. Press and hold down switch SW1 while pressing and releasing the Reset switch.
3. Release SW1.

At this point, the dsPIC device enters into a basic test code execution loop while displaying the test code results on the LCD. The following data is displayed on the LCD:

- RP1-RP3 – As the potentiometers are rotated through their range, the displayed value will vary from 0 to 0FFF.
- When SW1-SW4 are depressed, LED1-LED4 should light, respectively.
- At 25°C/77°F, the temperature sensor will yield a count of approximately 26x-27x. Touching U9 (TC1047A temperature sensor) should increase this count.
- A running counter is being sent to the Codec and read back when pins 2 and 3 of J12 are connected together. There is an attenuation factor and a large phase shift so the value will not be the same but the counter should be incrementing. (Jumper J9 must be configured for the Slave setting.)
- A running counter is sent to the MCP41010 digital potentiometer. The D POT value should be counting on the LCD.

When pin J2-3 is connected to J5-2 and pin J2-2 is connected to J5-3, "OK" will appear on the lower right corner of the screen at power-up.

Chapter 4. dsPICDEM™ 1.1 Development Hardware

4.1 dsPICDEM 1.1 Development Board Hardware Overview

This chapter describes the dsPICDEM 1.1 Development Board hardware. This development board features the hardware elements shown in Figure 4-1.

FIGURE 4-1: dsPICDEM 1.1 DEVELOPMENT BOARD


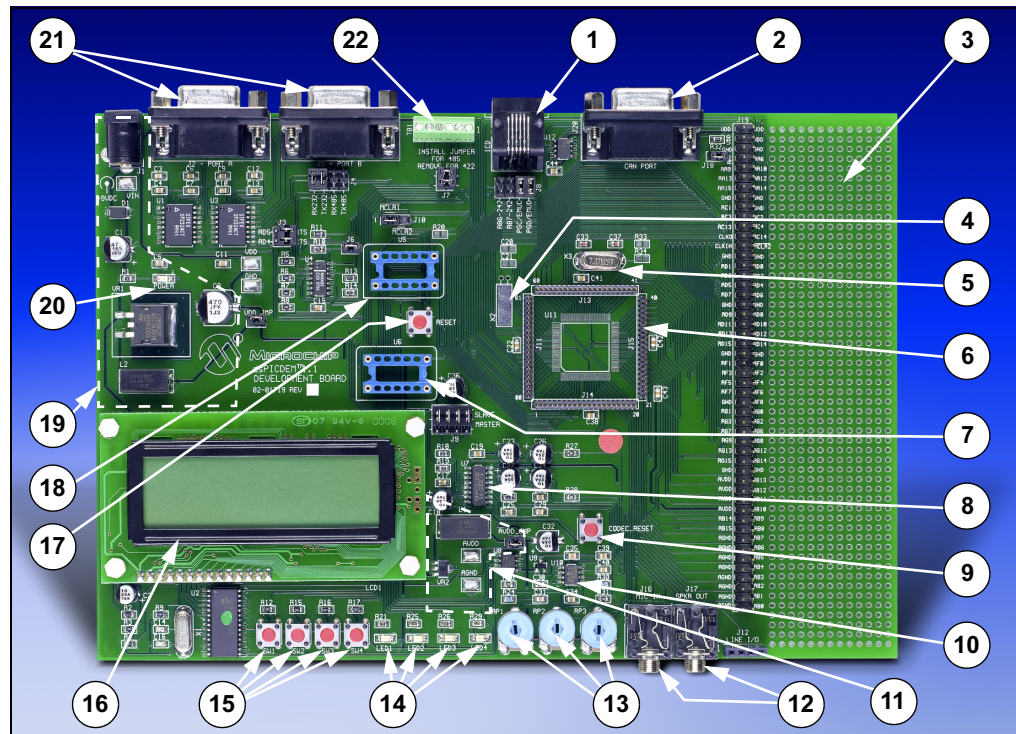


TABLE 4-1: dsPICDEM 1.1 DEVELOPMENT BOARD HARDWARE

No.	Hardware Element	No.	Hardware Element
1	ICD Connector (Section 4.1.10)	12	Phono Jacks (Section 4.1.11)
2	CAN Port (Section 4.1.2)	13	Analog Potentiometers (Section 4.1.5)
3	Prototyping Area (Section 4.1.17)	14	LEDs (Section 4.1.7)
4	Oscillator X2 (Section 4.1.15)	15	Push button Switches (Section 4.1.6)
5	Oscillator X3 (Section 4.1.15)	16	LCD Graphic Display (Section 4.1.9)
6	Emulation Headers ⁽¹⁾ (Section 4.1.12)	17	Reset Switch (Section 4.1.16)
7	Si3000 External Clock Socket (Section 4.1.11)	18	Canned Crystal Socket (Section 4.1.15)
8	Si3000 Codec (Section 4.1.11)	19	VDD Regulator (Section 4.1.13)
9	Codec Reset Switch (Section 4.1.11)	20	Power On LED (Section 4.1.14)
10	Temperature Sensor (Section 4.1.4)	21	RS-232 Serial Ports (Section 4.1.1)
11	AVDD Regulator (Section 4.1.13)	22	RS-485/RS-422 Port (Section 4.1.3)

Note 1: See Plug-in Module shown in Figure 4-2.

FIGURE 4-2: DSPIC30F DEVICE PLUG-IN MODULE

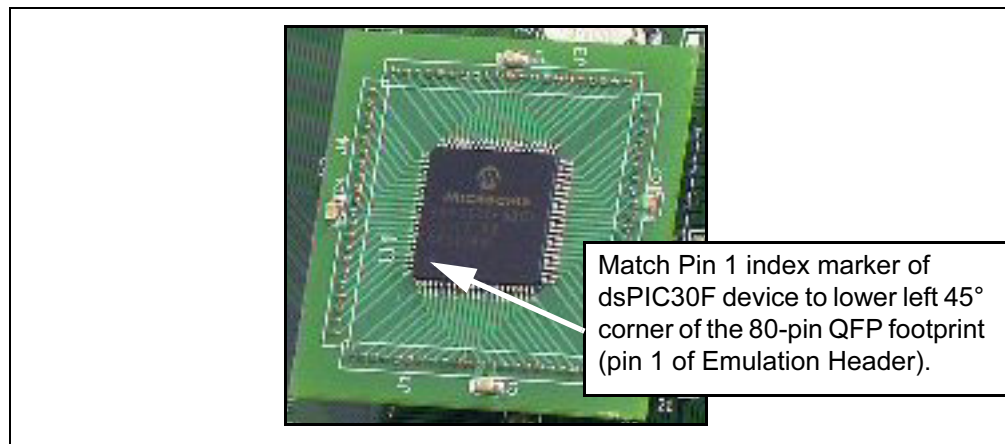

4.1.1 RS-232 Serial Ports

Two RS-232 serial communication channels are provided on the dsPICDEM 1.1 Development Board. One serial communication channel (DB9 connector J5/PORT B) can be configured as an RS-232 or RS-485/RS-422 communication channel by setting jumper J4 to the RX232/TX232 position. This jumper position connects the dsPIC UART channel 1 U1RX and U1TX pins to an RS-232 level-shifting IC (U3).

The serial port is configured as Data Communication Equipment (DCE), and can be connected to a PC using a straight-through cable. If hardware handshaking is required, inserting jumper J3 will connect CTS and RTS to port pins RD4 and RD5 on the dsPIC device. These pins can support CTS/RTS through a bit-bang control approach. Both pins are connected to IC U3.

Setting jumper J4 to the TX485/RX485 position configures the dsPIC UART channel 1 U1RX and U1TX pins for a RS-485/RS-422 communication channel.

The second serial communication channel (DB9 connector J2/PORT A) is connected to the dsPIC UART channel 2 U2RX and U2TX pins via RS-232 level-shifting IC (U1). This channel is a dedicated RS-232 serial communication channel. Hardware flow control is not provided.

The schematic of these ports is shown in **Figure A-4: “dsPICDEM 1.1 Development Board Schematic (Sheet 3 of 5)”**

4.1.2 CAN Port

The CAN RXD and TXD lines of the MCP2551 are connected to the dsPIC CANRX and CANTX pins. CAN bus signals (CANH and CANL) are available on DB9 connector J20. The CANH and CANL bus can be locally terminated with a 120-ohm resistor by inserting jumper, J18.

The schematic of the CAN port is shown in **Figure A-4: “dsPICDEM 1.1 Development Board Schematic (Sheet 3 of 5)”**.

4.1.3 RS-485/RS-422 Port

Signals for the RS-485/RS-422 port are available on the 6-pin terminal block labeled TB1. The terminal block can be reconfigured from RS-485 to RS-422 by removing the jumper on J7. Inserting jumper J6 will terminate the bus with a 120-ohm resistor.

The RX485 and TX485 lines of the MAX489E can be tied to the dsPIC UART channel 1 U1RX and U1TX pins by moving the jumper on J4 to the TX485/RX485 position.

MAX489E receiver and driver output enables are controlled by port pins RG0 and RG1, respectively.

The schematic of the RS-485 and RS-422 ports is shown in **Figure A-4: “dsPICDEM 1.1 Development Board Schematic (Sheet 3 of 5)”**.

4.1.4 Temperature Sensor

Temperature sensor U9 is a -40°C to $+125^{\circ}\text{C}$ linear output TC1047A connected to analog channel AN8 of the dsPIC device. The output of the temperature sensor is fed through a second-order low-pass filter before connection to the dsPIC device. The low-pass filter cutoff frequency is set at 10 Hz. The output voltage range for the TC1047A is typically 750 mV at $+25^{\circ}\text{C}$. The TC1047A exhibits a typical 10 mV/C voltage slope.

The schematic of the temperature sensor is shown in **Figure A-6: “dsPICDEM 1.1 Development Board Schematic (Sheet 5 of 5)”**.

4.1.5 Analog Potentiometers

Three 5 kOhm potentiometers are connected to analog channels AN4, AN5 and AN6. The voltage output range for each potentiometer is between 0V DC and 5V DC. The voltage source is provided by VR2, which is a separate voltage source for all the analog components on the development board.

The schematic of the analog potentiometers is shown in **Figure A-6: “dsPICDEM 1.1 Development Board Schematic (Sheet 5 of 5)”**.

4.1.6 Push Button Switches

Switches SW1-SW4 are connected to port pins RA12-RA15, respectively, on the dsPIC device. The signal lines are normally pulled up to +5V DC through 10 kOhm resistors. Pressing the switch will short the line to ground. Port pins RA12-RA15 are configured as the INT1-INT4 external interrupt pins.

The schematic of the push button switches is shown in **Figure A-6: “dsPICDEM 1.1 Development Board Schematic (Sheet 5 of 5)”**.

4.1.7 LEDs

Four red LEDs, LED1-LED4, are connected to port pins RD0-RD3, respectively, on the dsPIC device. The LED anodes are tied to VDD through a 1.2 kOhm resistor.

The schematic of the LEDs is shown in **Figure A-6: “dsPICDEM 1.1 Development Board Schematic (Sheet 5 of 5)”**.

4.1.8 Digital Potentiometer

A single channel digital potentiometer, MCP41010, is provided on the development board. Control of the digital potentiometer is via the dsPIC SPI 2 communication channel. The output of the digital potentiometer is applied to a low-pass filter with a cut-off frequency of approximately 4 kHz. The output of the LP filter is connected to the analog channel AN3 of the dsPIC device.

The schematic of the digital potentiometers is shown in **Figure A-6: “dsPICDEM 1.1 Development Board Schematic (Sheet 5 of 5)”**.

4.1.9 LCD Graphic Display

The LCD graphic display is a PG12232D-L 8-bit 122 x 32 dot-matrix LCD controlled by a PIC18F242 LCD controller. The dsPIC30F device accesses the LCD controller via the SPI 2 port. For a detailed description of the communication protocol, see **Appendix B. “LCD Controller Specification”**.

The LCD PIC18F242 controller is reset by setting jumper J10 to the MCLR2 position and pressing the Reset switch. Moving jumper J10 back to the MCLR1 position returns RESET control of the dsPIC30F device.

The schematic of the analog potentiometers is shown in **Figure A-5: “dsPICDEM 1.1 Development Board Schematic (Sheet 4 of 5)”**.

4.1.10 ICD Connector

By way of the modular connector ICD, the MPLAB ICD 2 can be connected for low-cost programming and debugging of the dsPIC device. Programming and debugging the dsPIC device requires that jumper J8 is set to the PGC/EMUC and PGD/EMUD position and jumper J10 is set to the MCLR1 position. Programming the PIC18F242 LCD controller requires that jumper J8 is set to the RB6/242 and RB7/242 position and jumper J10 is set to the MCLR2 position.

The PIC18F242 LCD controller is programmed at the factory with the LCD driver code. Under normal operating conditions, no additional programming should be required for this device.

The schematic of the analog potentiometers is shown in **Figure A-5: “dsPICDEM 1.1 Development Board Schematic (Sheet 4 of 5)”**

4.1.11 Si3000 Voice-band Codec

An Si3000 Codec from Silicon Labs is included on the development board. Stereo Jacks provide MIC input on J16 and SPKR OUT output on J17. LINE I/O on J12 provides line-in and line-out connections. J9 provides a selection for Master or Slave operation for the Si3000. When the Si3000 is operated in Master mode, the user must provide a suitable clock oscillator in the U6 socket. The CODEC RESET switch resets the Si3000.

For detailed operational information, refer to the Si3000 data sheet available on www.silabs.com. For a schematic of the Si3000 circuit, see **Figure A-5: “dsPICDEM 1.1 Development Board Schematic (Sheet 4 of 5)”**.

4.1.12 Emulation Header

Headers J11 and J13-J15 provide a connection to the MPLAB ICE 4K In-Circuit Emulator. The emulation headers also support Plug-in Modules containing dsPIC30F devices soldered onto adaptor boards (see Section 4.1.18). These Plug-in Modules facilitate quick change out of the 80-pin TQFP device.

The schematic of the Emulation Header is shown in **Figure A-3: “dsPICDEM 1.1 Development Board Schematic (Sheet 2 of 5)”**.

4.1.13 Power Supply

The dsPICDEM 1.1 is powered by a +9V AC/DC wall adapter. Separate +5V DC regulators (VDD and AVDD) are provided to their respective processor pins and prototyping area. Separate ground planes are connected through a single point.

Jumpers VDD_JMP and AVDD_JMP allow the supplied power source to be bypassed and alternate supplies to be provided.

The schematics of the power supply circuits are shown in **Figure A-3: “dsPICDEM 1.1 Development Board Schematic (Sheet 2 of 5)”**.

4.1.14 Power-on Indicator

A green LED is connected to the input of the regulators to indicate the presence of power. See **Figure A-3: “dsPICDEM 1.1 Development Board Schematic (Sheet 2 of 5)”**.

4.1.15 Oscillator Options

- Crystal oscillator (7.3728 MHz) is supplied with the development board.
- Through holes and pads are provided for a user-furnished watch-type crystal and two capacitors for SOSC1 and SOSC2.
- Socket and pads are provided for an output pull-up resistor for user furnished oscillator to processor.
- External clock connections from J1.

Oscillator selection parameters are shown in Table 4-2.

TABLE 4-2: OSCILLATOR SELECTION PARAMETERS

Oscillator Selection on dsPICDEM 1.1 Demo Board	Modifications on dsPICDEM 1.1 Demo Board
Crystal (X3)	R33, R34, R20, C20, C21 and X2 open, U5 empty. Crystal in X3, caps in C33 and C37.
Mini Crystal (X2)	R20, R33, R34, C33, C37 and X1 open, U5 empty. Crystal in X2, caps in C20 and C21.
Canned Oscillator (U5)	R20, R33, R34, C20, C21, C33, C37, X2 and X3 open, U5 installed.
RC	R33, R34, C20, C21, C33, X2 and X3 open, U5 empty. Cap in C37 and resistor in R20.
External Clock	R20, C20, C21, C33, C37, U5, X2 and X3 open. 0 ohm installed for R33 and R34.

The oscillator circuit schematics are shown in **Figure A-2: “dsPICDEM 1.1 Development Board Schematic (Sheet 1 of 5)”**

4.1.16 Reset Switch

By placing J10 jumper in the MCLR1 position, the Reset switch connected to the processor MCLR pin provides a hard RESET to the dsPIC device. By placing J10 jumper in the MCLR2 position, the Reset switch is connected to the PIC18F242 LCD controller.

The Reset switch circuit is shown in **Figure A-3: “dsPICDEM 1.1 Development Board Schematic (Sheet 2 of 5)”**.

4.1.17 Prototyping Area

A prototyping area and associated header are provided on the development board to enable additional ICs and attachment boards to be added (see **Figure A-2: “dsPICDEM 1.1 Development Board Schematic (Sheet 1 of 5)”**).

4.1.18 Sample Devices

A sample dsPIC device programmed with the demonstration code is included in the dsPICDEM 1.1 Development Board Kit. The 80-pin TQFP is soldered to a 1.5" x 1.5" adaptor PCB, which is inserted onto the emulation header, J11 and J13-J15.

Handle the device carefully when inserting and extracting the adaptor board. The orientation of the adaptor board is important. The Microchip logo and device part numbering should be aligned to read from left to right before insertion of the adaptor board. The pin 1 index marker of dsPIC30F device should align with the lower left 45° corner of the 80-pin QFP footprint (pin 1 of Emulation Header J14).

Pin-out information for the emulation header is shown in **Figure A-3: “dsPICDEM 1.1 Development Board Schematic (Sheet 2 of 5)”**.



Appendix A. Hardware Drawings and Schematics

A.1 INTRODUCTION


This Appendix provides a layout drawing of the printed circuit board followed by schematics for the dsPICDEM 1.1 Development Board.

A.2 HIGHLIGHTS

- dsPICDEM 1.1 Development Board Layout
- dsPICDEM 1.1 Development Board Schematics


dsPICDEM™ 1.1 Development Board User's Guide

FIGURE A-1: dsPICDEM 1.1 DEVELOPMENT BOARD LAYOUT

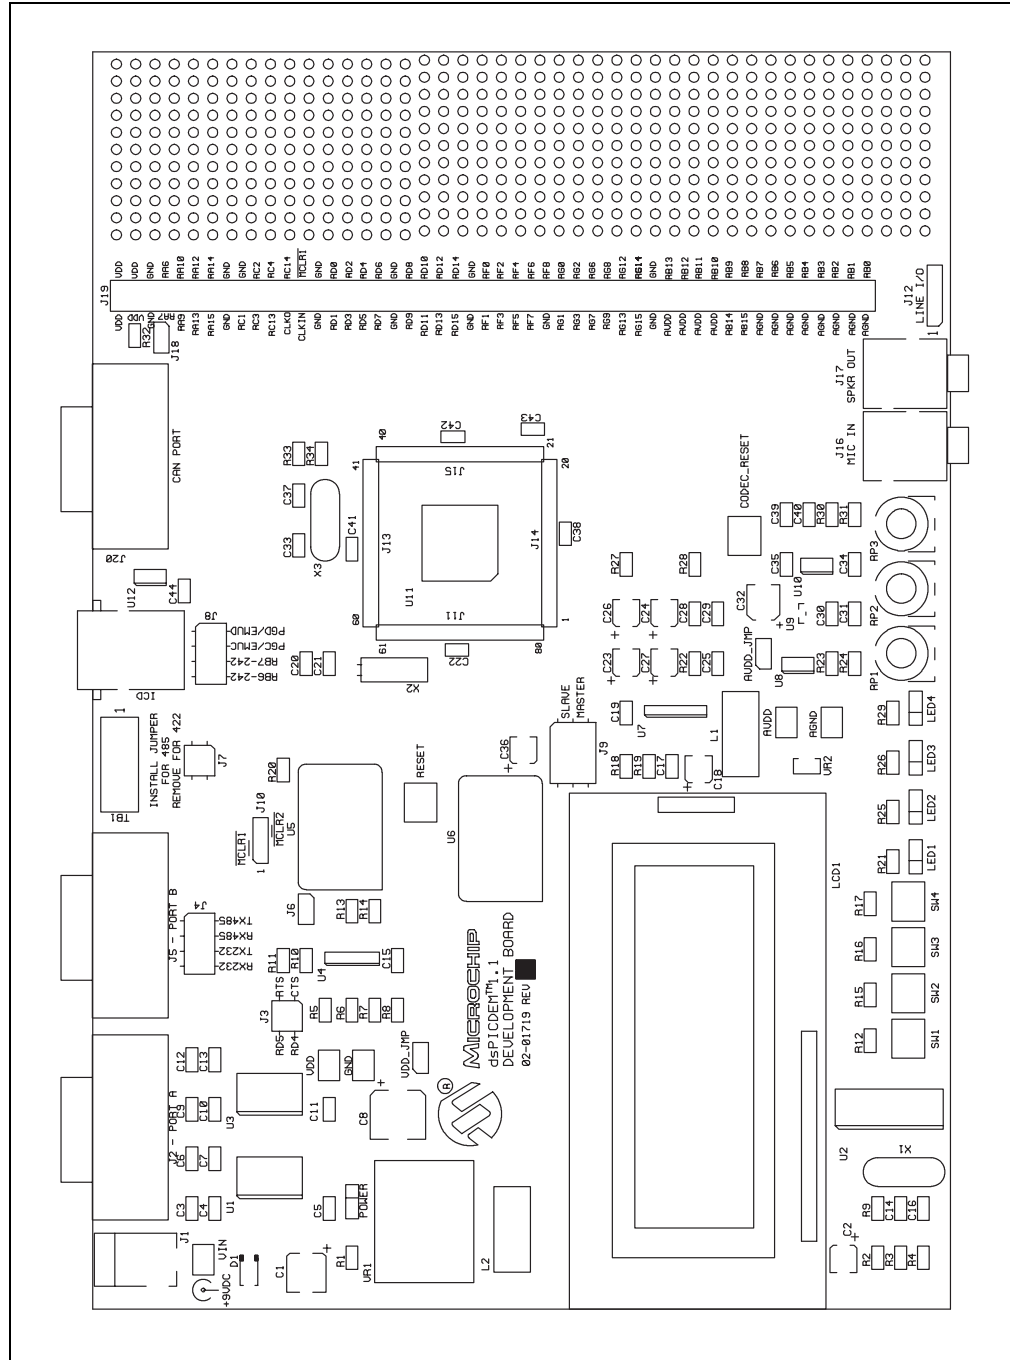


Hardware Drawings and Schematics

FIGURE A-2: dsPICDEM 1.1 DEVELOPMENT BOARD SCHEMATIC (SHEET 1 OF 5)

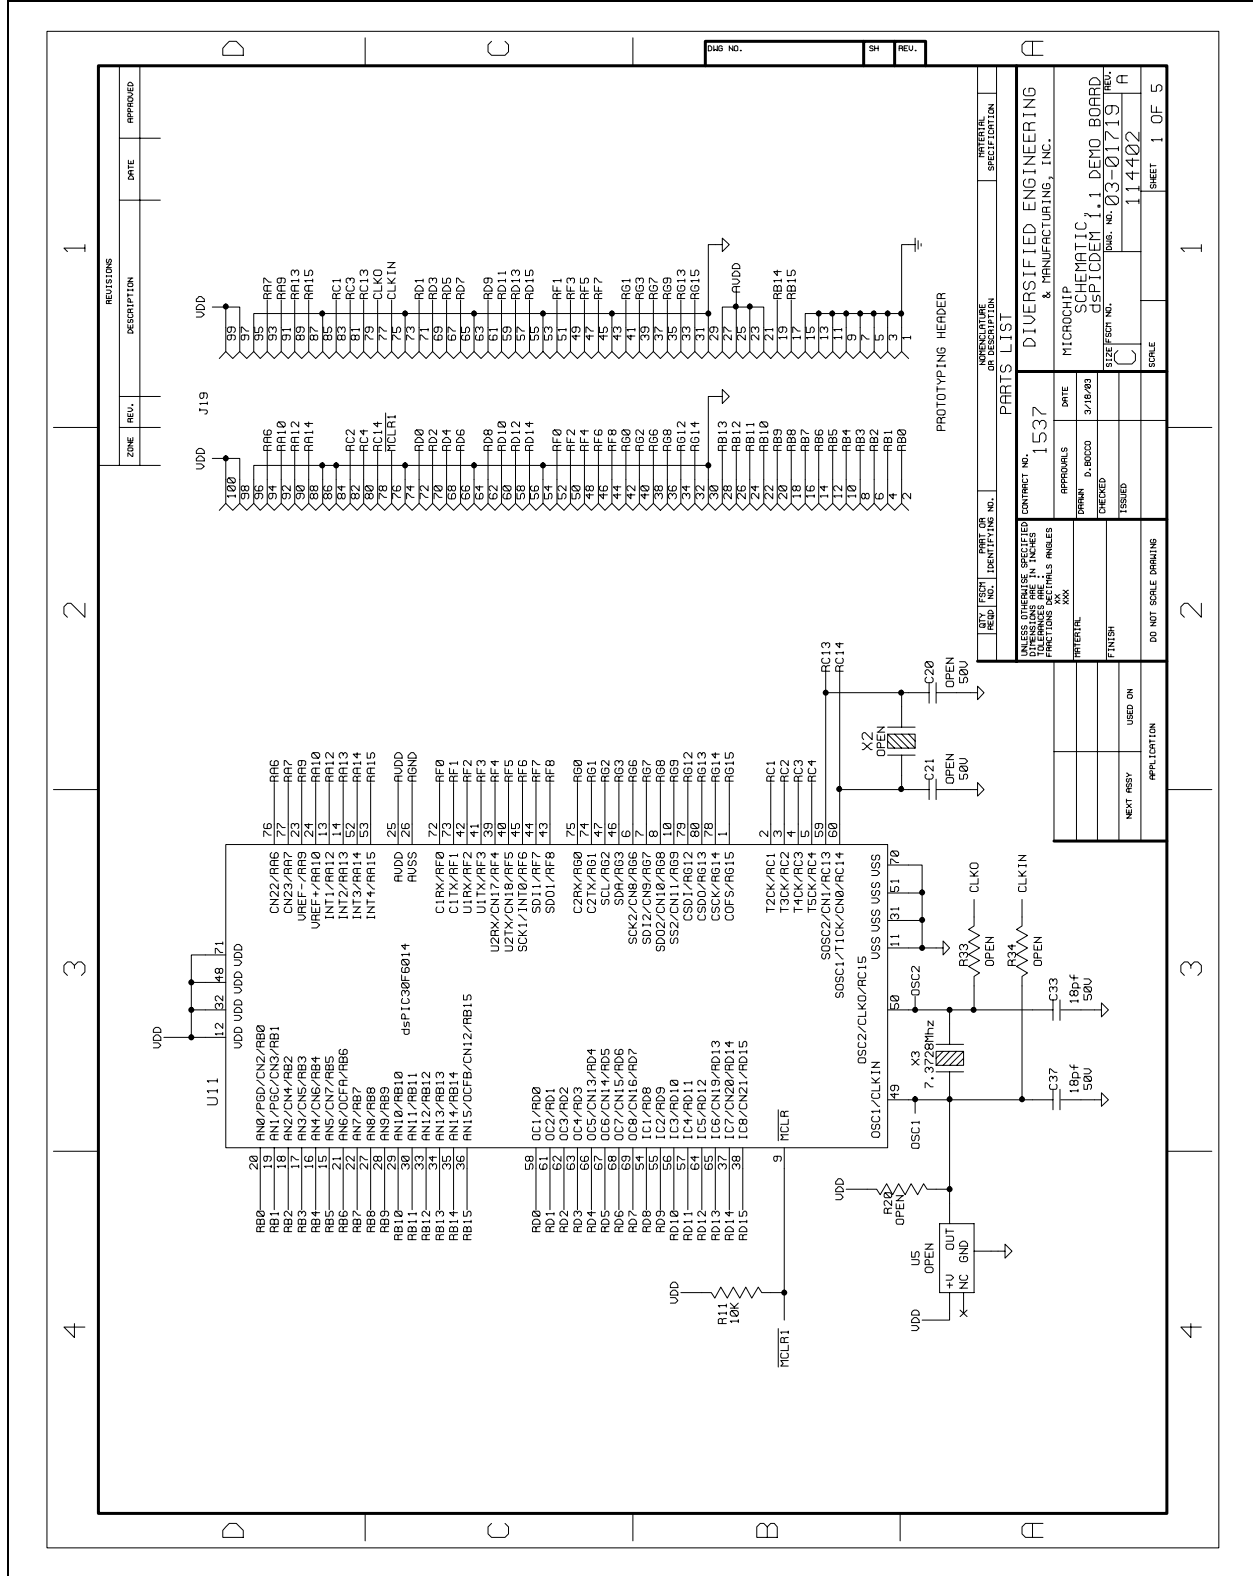


dsPICDEM™ 1.1 Development Board User's Guide

FIGURE A-3: dsPICDEM 1.1 DEVELOPMENT BOARD SCHEMATIC (SHEET 2 OF 5)

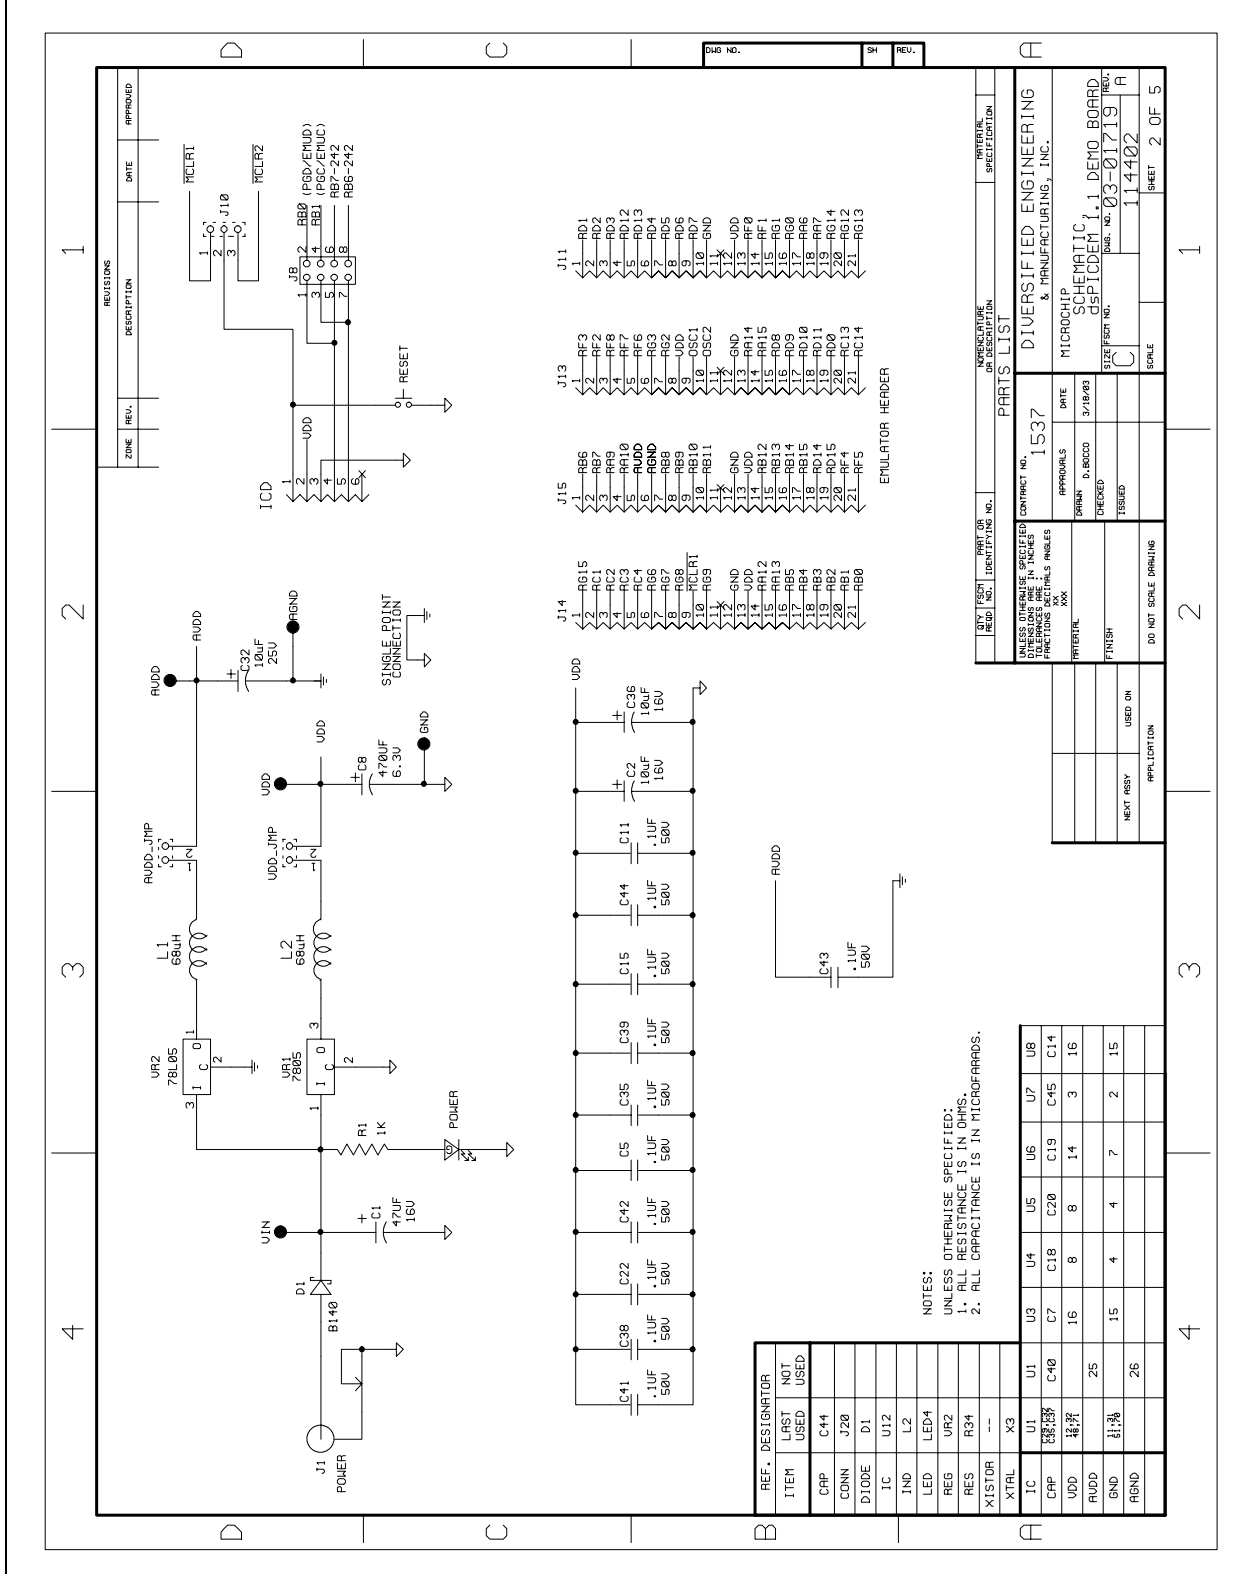


Hardware Drawings and Schematics

FIGURE A-4: dsPICDEM 1.1 DEVELOPMENT BOARD SCHEMATIC (SHEET 3 OF 5)

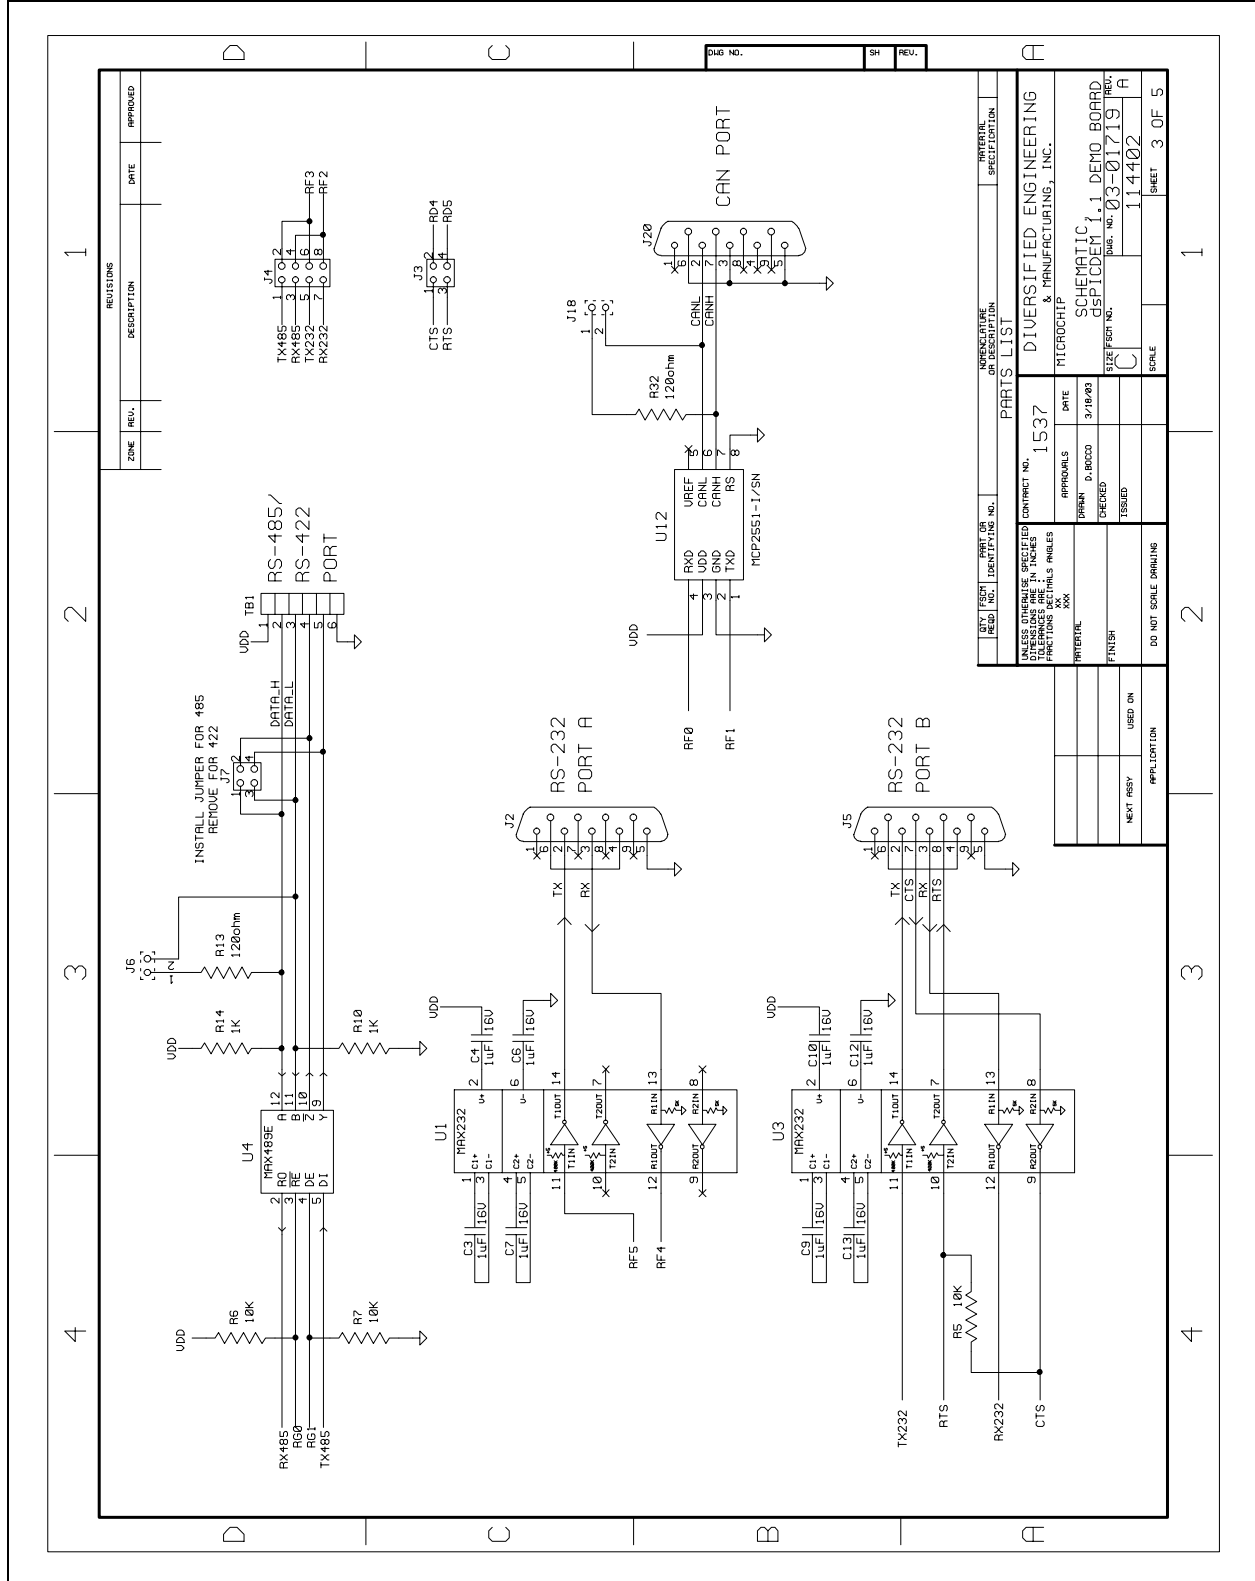


dsPICDEM™ 1.1 Development Board User's Guide

FIGURE A-5: dsPICDEM 1.1 DEVELOPMENT BOARD SCHEMATIC (SHEET 4 OF 5)

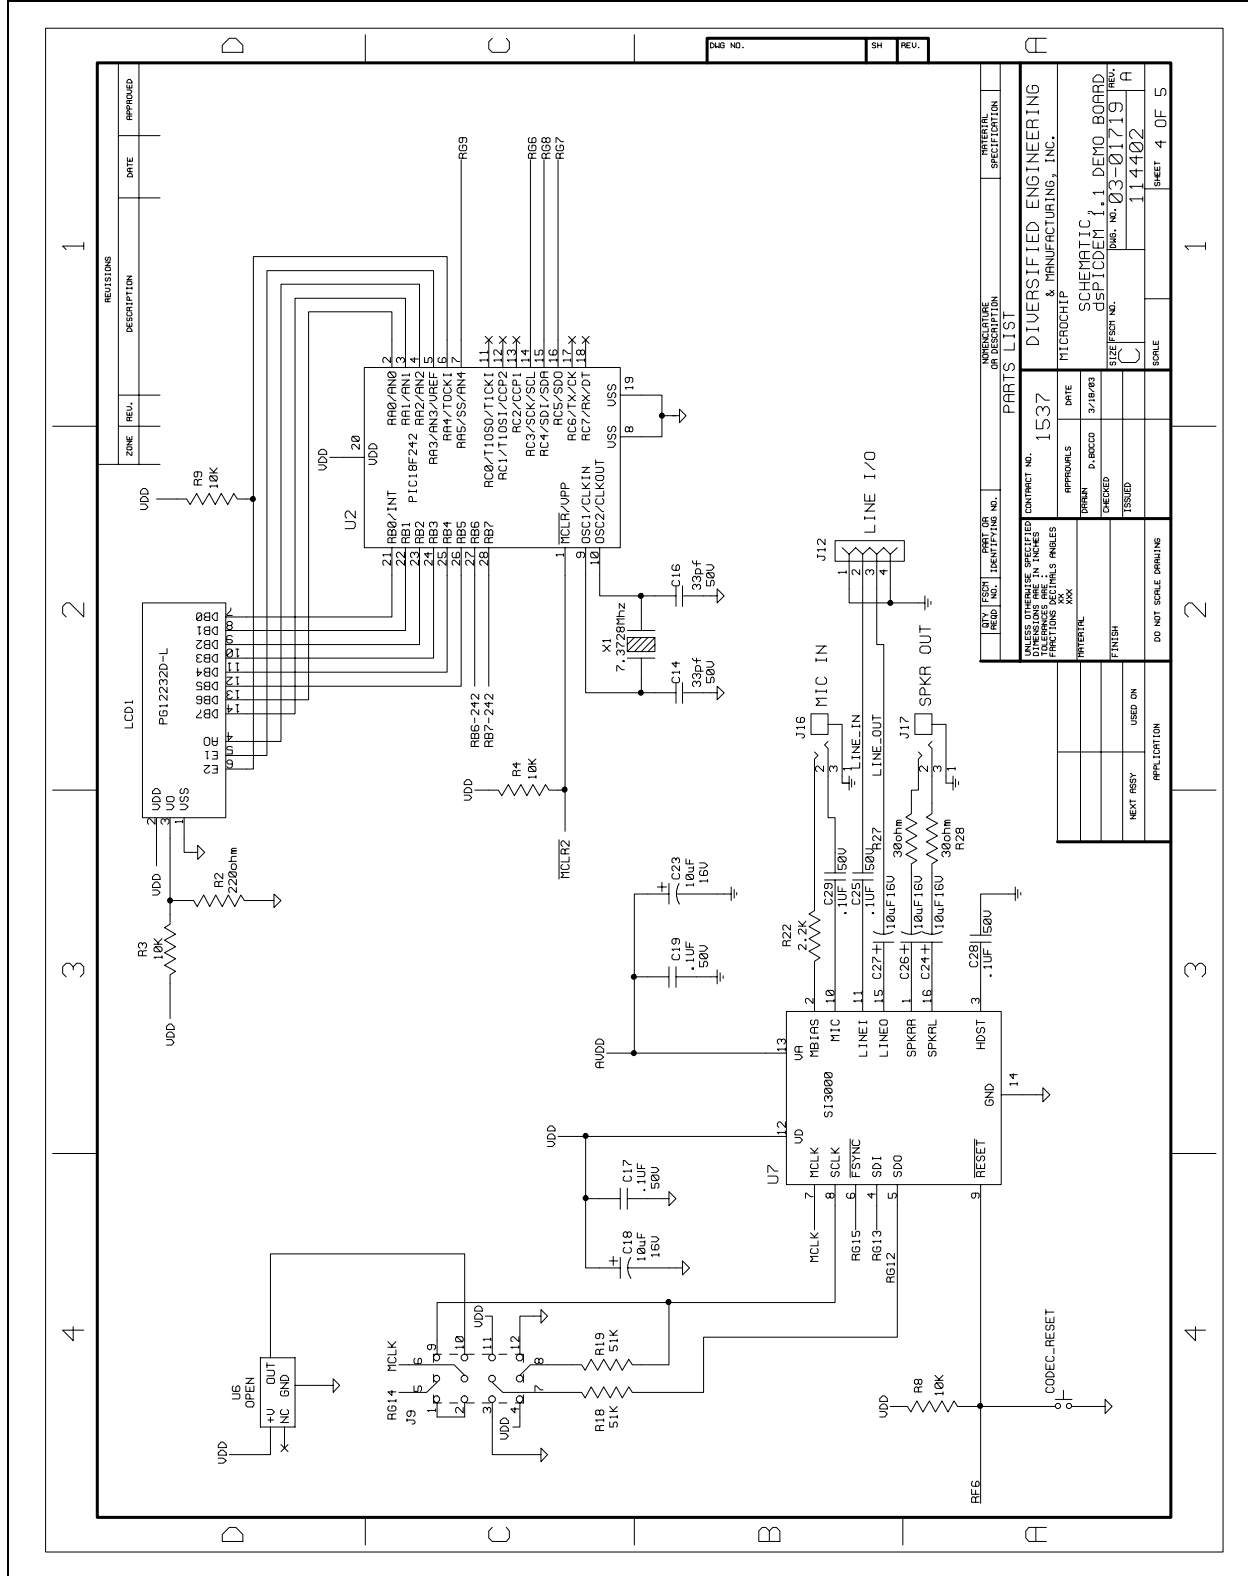

Hardware Drawings and Schematics

FIGURE A-6: dsPICDEM 1.1 DEVELOPMENT BOARD SCHEMATIC (SHEET 5 OF 5)

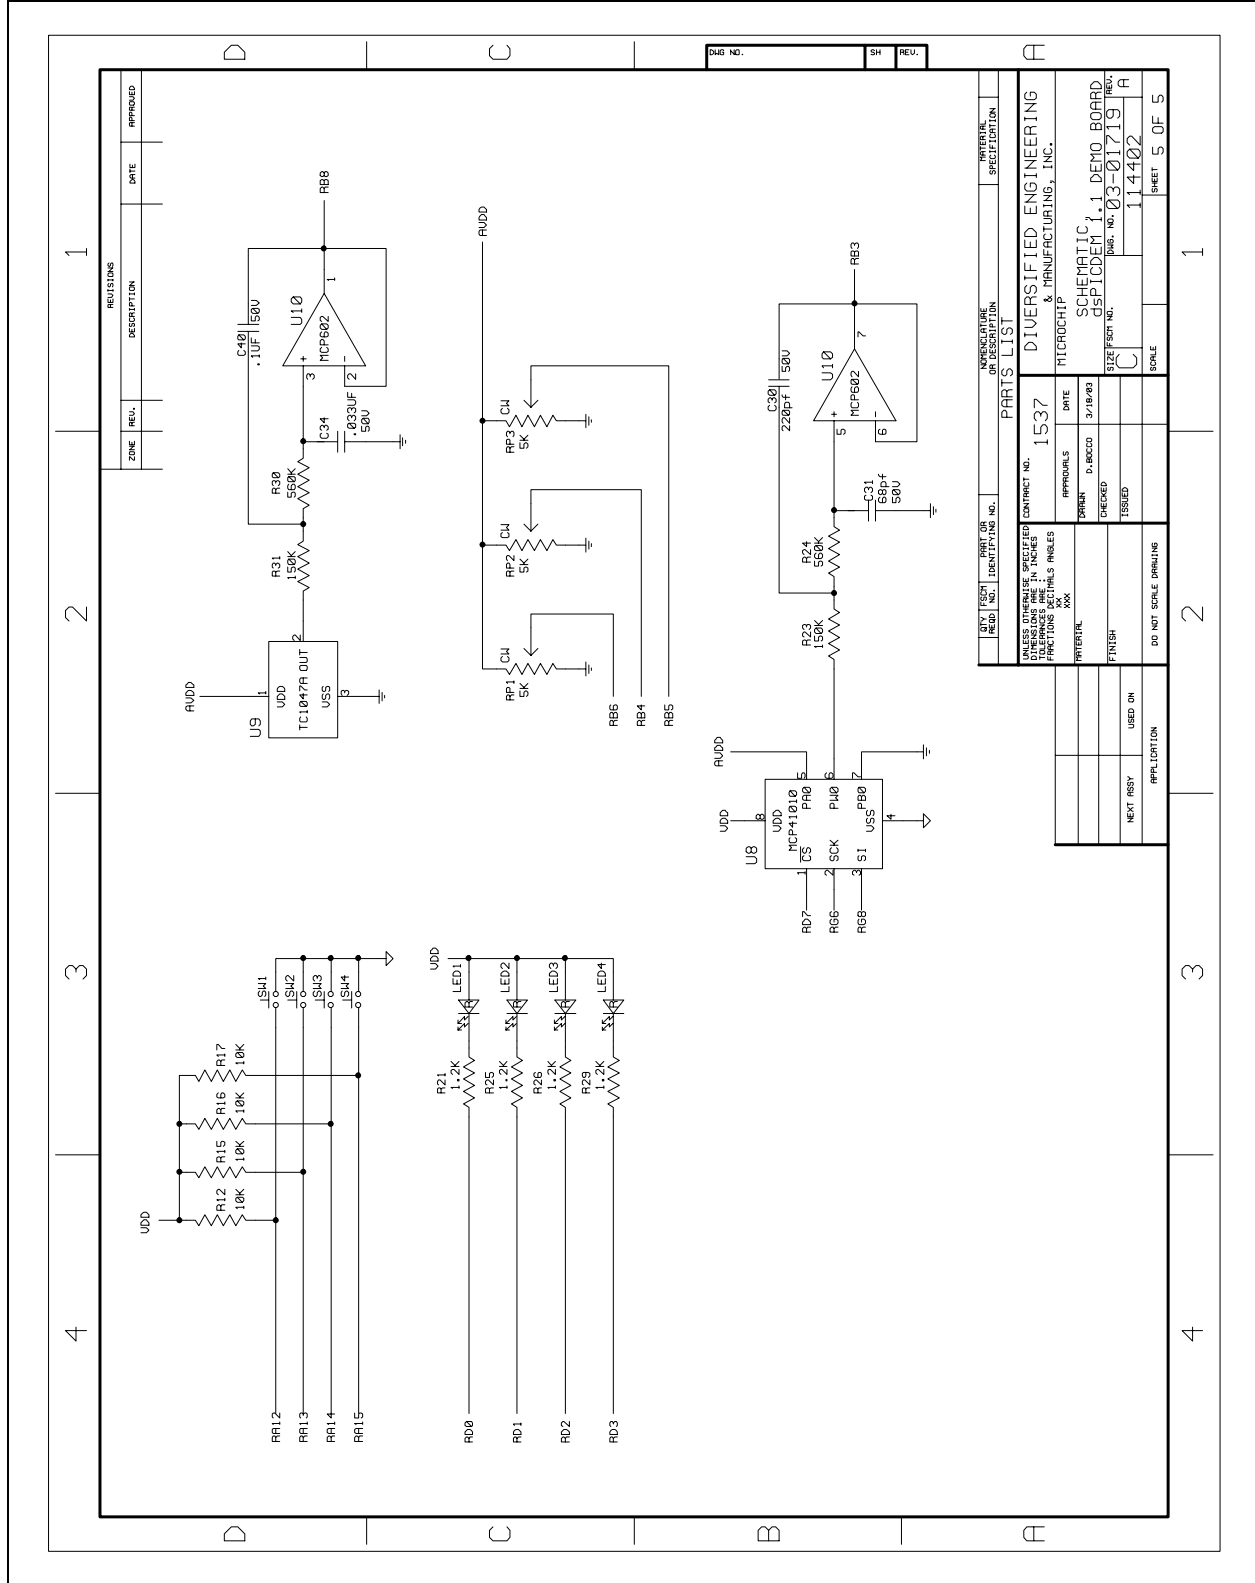

dsPICDEM™ 1.1 Development Board User's Guide

NOTES:

Appendix B. LCD Controller Specification

B.1 OVERVIEW

The LCD display on the dsPICDEM 1.1 Development Board is a PG12232D-L 8-bit 122 x 32 dot-matrix LCD controlled by a PIC18F242 LCD controller with a custom driver that supports a rich set of character and graphic commands. The 122 x 32 LCD supports a standard SED1520 type controller, which is interfaced to the PIC18F242 over a parallel interface bus. A full set of ASCII characters are available for display on a 4 x 20 character grid. In Graphics mode, individual pixels and bit patterns are supported. A line drawing facility is supported as part of the basic command set.

B.2 LCD CONTROLLER INTERFACE

The LCD controller (PIC18F242) is controlled via its Serial Peripheral Interface (SPI) port. The LCD controller operates as a slave SPI with a maximum SPI clock of 2.4 MHz. Using the standard PICmicro® nomenclature, the LCD controller is set up as a slave under Slave Select (SS) control with CKP = 0 and CKE = 0.

The dsPIC SPI peripheral should be configured for:

- SMP = 0
- CKE = 0
- CKP = 0
- MODE16 = 0 and MSTEN = 1

The SPI master clock should not exceed 2.4 MHz. The SS control line should be used to synchronize the interface at the byte level.

On power-up, the LCD controller requires approximately 100 mS to initialize its internal buffers and clear the LCD display. It will not accept any input until it has completed its initialization sequence.

The controller stores incoming bytes in an interrupt buffer that is 186 bytes deep so that the dsPIC device should not be able, under reasonable operation, to overrun the controller with input data. The buffer is large enough to hold a complete screen of characters plus several additional commands. The only way to overrun the buffer is to continuously send commands at a bit rate that is close to the maximum so that the LCD controller is completely occupied with receiving and storing the incoming commands and doesn't have sufficient extra time to process the commands. With SPI communications, the dsPIC device gets a return byte with every byte sent to the controller. The controller provides the current buffer count as the return byte for each byte sent. The return byte enables the dsPIC device to determine how many unprocessed bytes are in the controller's buffer after the previous byte was received by the controller. This number can never be less than the size of the proceeding command sent since the controller will not remove a command from its receive buffer until the entire command is received. This feature could be used for flow control by the dsPIC device, but given the speed of the controller and the size of the interrupt buffer, it is unlikely the dsPIC device could overflow the controller's buffer under normal usage. Thus, implementing flow control on the dsPIC device in all but the most unusual circumstances would be an unnecessary complication.

B.3 COMMANDS

B.3.1 Command Structure

All commands recognized by the LCD controller are one to three bytes in length.

The command structure is designed to follow a simple rule that allows the interface to be self-synchronizing at the command level (i.e., if a command is corrupted for some reason, the controller can resynchronize on the command stream without special error recovery procedures). The rule is that the first byte of a command always has its MSB = 1 and the remaining bytes of the command have their MSB = 0. There is an exception to the rule that MSB = 0 for all bytes except the first byte. Some of the column commands can have data in the MSB of their second byte and thus, may violate this rule. The processing code in the LCD controller will parse these special commands and allow the command exception.

All commands follow the form of a leading identification byte followed by zero to three data bytes. The data bytes are not condensed or combined with other data, or modified from the native form of the data. There is no handshaking or flow control required because of the speed and buffer depth of the controller. This greatly simplifies the interface on the dsPIC side since there is little advantage to putting wrappers around the individual commands. Nothing needs to be done to the data other than to send it.

B.3.2 Command Types

The LCD has three data types, each based on its own independent coordinate systems. The data types are:

- Character
- Pixel
- Column

Associated with each coordinate system is a “current” position of which each is independent of the other. These positions are:

- CharPos
- PixPos
- ColPos

B.3.2.1 CHARACTERS

The character commands are used to write characters to the display. The character coordinates are based on a 5 x 7 dot font justified to the upper left corner of the 6 x 8 box. The character cursor is a 5-pixel wide horizontal line that is justified to the lower left corner of the 6 x 8 box and can be turned on or off, or can be set to blink.

Character operators are based on character coordinates R and C (i.e., Row and Column). The current position, *CharPos*, specifies both the location of the character cursor and the default position that the next character command will use. The home position is the top left of the LCD display, *ChrPos* = (0,0).

The LCD accommodates four character rows (0-3) and 20 character columns (0-19). Unless otherwise specified, incrementing *ChrPosC* beyond column 19 will wrap to the next row (i.e., *ChrPosC* = 0 and *ChrPosR* + 1). If *ChrPosR* exceeds 3, it will wrap to row 0.

B.3.2.2 PIXELS

The pixel commands give the user control over individual pixels. Pixel coordinates (X,Y) have their origin at the lower left of the LCD display. The coordinate range is X: 0-121 and Y: 0-31. The PixPos (X,Y) specifies the default location for pixel commands. The home position is the bottom left of the LCD display, PixPos = (0,0).

B.3.2.3 COLUMNS

The column commands are used to write bitmaps to the display. A column is a vertical column of 8 pixels that spans the height of one of the character rows. Column coordinates (X,R) have their origin at the upper left corner of the LCD.

The X is defined the same as for the pixel coordinates and the R is defined the same as for the character coordinates. The coordinate range is X: 0->121 and R: 0->3. The ColPos (X,R) specifies the default location for column commands. The home position is the top left of the LCD display, ColPos = (0,0).

Unless otherwise specified, incrementing ColPosX past 121 will wrap to the next line (i.e., ColPosX = 0 and ColPosY + 1). If ColPosY exceeds 31, it will wrap to line 0.

B.3.3 Power-up Defaults

Upon a device RESET, the following LCD controller conditions are valid:

- Character cursor off
- All coordinate variables are set to their home values:
 - ChrPosC = 0, ChrPosR = 0
 - PixPosX = 0, PixPosY = 0
 - ColPosX = 0, ColPosR = 0
 - ScrollY = 0

B.3.4 Command Description

A basic command format is implemented on the PIC18F242. In general, communicating with the PIC18F242 LCD controller requires adherence to this protocol:

- Command name: Description
- Cmd: Opcode value
- Data: Number of data bytes
 - [7 6 5 4 3 2 1 0] Command dependent data
 - [7 6 5 4 3 2 1 0] Command dependent data
 - [7 6 5 4 3 2 1 0] Command dependent data

B.4 GENERAL COMMANDS

B.4.1 Reset Command

The Reset command resets the LCD display and PIC18F242 to their power-up state.

Field	Form	Value
Opcode		0x80
Data	None	None

B.4.2 Home Command

The Home command sets all coordinate variables to their home values and leaves the display unchanged.

Field	Form	Value
Opcode		0x81
Data	None	None

B.4.3 HomeClear Command

The HomeClear command clears the entire display and then sets all coordinate variables to their home values.

Field	Form	Value
Opcode		0x82
Data	None	None

B.4.4 Scroll Command

The Scroll command rolls the display in the vertical axis by the amount ScrollY. The LCD data array consists of 32 lines of 122 pixels each. If scrolling, value ScrollY is set to zero and the top row of the data array is displayed on the top row of the display.

Field	Form	Value
Opcode		0xA3
Data	0 0 0 Y4 Y3 Y2 Y1 Y0	0-31

Note: The Scroll command has no effect on the various coordinate systems. It only changes the mapping of the data to the display (e.g., the top character row would be rolled to the bottom row of the display surface if ScrollY = 8 but its location in the data array is still at 0).

LCD Controller Specification

B.5 CHARACTER COMMANDS

The character commands treat the display like a 20-column, 4-row character display where the characters occupy 6 x 8 pixel elements. Note that there are 20 character locations on a row, each 6 pixels wide. This current implementation only uses 120 pixels of the 122-pixel wide display. The spare two-pixel columns are on the right of the display and cannot be affected by the character commands. The controller has a fixed space 5 x 7 font set for the printable ASCII characters in range: 0x20 -> 0x7E. The controller also recognizes three special characters that do not affect the display.

Note: The ChrPos increment after writing is suppressed for the special characters.

1. CR: (0x0D) Increments ChrPosR.
2. LF: (0x0A) Sets ChrPosC = 0 and increments ChrPosR.
3. BS: (0x08) Decrements ChrPosC if ChrPosC > 0; it is non-destructive

B.5.1 ChrPos Command

The ChrPos command sets the character position to ChrPosC, ChrPosR. This command has no effect on the display except for moving character cursor if it is turned on.

Field	Form	Value
Opcode		0xC5
ChrPosC	0 0 0 C4 C3 C2 C1 C0	Column 0-19
ChrPosR	0 0 0 0 0 0 R1 R2	Row 0-3

B.5.2 ChrPosInc Command

The ChrPosInc command increments the character position. This command has no effect on the display except for moving the character cursor if it is turned on.

Field	Form	Value
Opcode		0x8E
Data	None	None

B.5.3 WrtChr Command

The WrtChr command sets ChrPos to (ChrPosC,ChrPosR), then writes ASCII character to ChrPos.

Field	Form	Value
Opcode		0xE6
Data	0 A6 A5 A4 A3 A2 A1 A0	ASCII character
ChrPosC	0 0 0 C4 C3 C2 C1 C0	Column 0-19
ChrPosR	0 0 0 0 0 0 R1 R0	Row 0-3

B.5.4 WrtChrInc Command

The WrtChrInc command sets ChrPos to (ChrPosC,ChrPosR), writes an ASCII character to ChrPos, and then increments ChrPos.

Field	Form	Value
Opcode		0xE7
Data	0 A6 A5 A4 A3 A2 A1 A0	ASCII character
ChrPosC	0 0 0 C4 C3 C2 C1 C0	Column 0-19
ChrPosR	0 0 0 0 0 0 R1 R0	Row 0-3

dsPICDEM™ 1.1 Development Board User's Guide

B.5.5 WrtChrNext Command

The WrtChrNext command writes an ASCII character to the current ChrPos, then increments ChrPos.

Field	Form	Value
Opcode		0xA8
Data	0 A6 A5 A4 A3 A2 A1 A0	ASCII character

B.5.6 ChrClearRow Command

The ChrClearRow command clears the entire row ChrPosR and leaves ChrPosC = 0.

Field	Form	Value
Opcode		0xA9
ChrPosR	0 0 0 0 0 0 R1 R0	Row 0-3

B.5.7 ChrClearEOL Command

The ChrClearEOL command clears row ChrPosR from the current location to the end of the line and leaves ChrPos unchanged.

Field	Form	Value
Opcode		0x8A
Data	None	None

B.5.8 ChrCursorOff Command

The ChrCursorOff command turns off the character cursor.

Field	Form	Value
Opcode		0x8B
Data	None	None

B.5.9 ChrCursorOn Command

The ChrCursorOn command turns on the character cursor at the current ChrPos.

Field	Form	Value
Opcode		0x8C
Data	None	None

B.5.10 ChrCursorBlink Command

The ChrCursorBlink command controls cursor blinking. If the time is set to zero, the cursor will not blink, else the cursor blinks with equal on and off times, with the on time being given by the blink time.

Field	Form	Value
Opcode		0xAD
Blink Time	0 0 0 0 0 T2 T1 T0	(0-7) x 0.125 seconds

B.6 PIXEL COMMANDS

The pixel commands treat the display like a 122-column, 32-line set of pixels, which is the native resolution of the display. The pixel coordinate system differs from the others in having its origin at the lower left instead of at the upper left. Pixel coordinates are intended for graphs rather than letters or bitmap pictures.

B.6.1 PixPos Command

The PixPos command sets PixPos to (PixPosX,PixPosY) and leaves the display unchanged. This command is intended to be used in conjunction with the PixLine command.

Field	Form	Value
Opcode		0xD7
PixPosX	0 X6 X5 X4 X3 X2 X1 X0	Column 0-121
PixPosY	0 0 0 Y4 Y3 Y2 Y1 Y0	Line 0-31

B.6.2 PixOn Command

The PixOn command sets PixPos to (PixPosX,PixPosY) and turns on the pixel at that location. This command does not increment PixPos.

Field	Form	Value
Opcode		0xD8
PixPosX	0 X6 X5 X4 X3 X2 X1 X0	Column 0-121
PixPosY	0 0 0 Y4 Y3 Y2 Y1 Y0	Line 0-31

B.6.3 PixOff Command

The PixOff command sets PixPos to (PixPosX,PixPosY) and turns off the pixel at that location. This command does not increment PixPos.

Field	Form	Value
Opcode		0xD9
PixPosX	0 X6 X5 X4 X3 X2 X1 X0	Column 0-121
PixPosY	0 0 0 Y4 Y3 Y2 Y1 Y0	Line 0-31

B.6.4 PixLine Command

The PixLine command draws a straight line from the current PixPos to the specified location and leaves PixPos set to the new location.

Field	Form	Value
Opcode		0xDA
PixPosX	0 X6 X5 X4 X3 X2 X1 X0	Column 0-121
PixPosY	0 0 0 Y4 Y3 Y2 Y1 Y0	Line 0-31

dsPICDEM™ 1.1 Development Board User's Guide

B.7 COLUMN COMMANDS

The column commands treat the display like a 122-column, 4-row set of 8-pixel high, 1-pixel wide display elements. The Least Significant bit of the column data byte is closest to the top of the display. The column rows are the same as the character rows but the horizontal axis is addressable to the pixel.

B.7.1 ColPos Command

The ColPos command sets ColPos to (ColPosX, ColPosR).

Field	Form	Value
Opcode		0xDB
ColPosX	0 X6 X5 X4 X3 X2 X1 X0	Column 0-121
ColPosR	0 0 0 0 0 0 R1 R0	Row 0-3

B.7.2 WrtColNext Command

The WrtColNext command writes column data to the current ColPos and then increments ColPos.

Field	Form	Value
Opcode		0xBC
Column Data	D7 D6 D5 D4 D3 D2 D1 D0	Data

B.7.3 WrtColNextOR Command

The WrtColNextOR command ORs column data with existing data and writes the result to the current ColPos, then increments ColPos.

Field	Form	Value
Opcode		0xBD
Column Data	D7 D6 D5 D4 D3 D2 D1 D0	Data

B.7.4 WrtColNextAND Command

The WrtColNextAND command ANDs column data with existing data and writes the result to the current ColPos, then increments ColPos.

Field	Form	Value
Opcode		0xBE
Column Data	D7 D6 D5 D4 D3 D2 D1 D0	Data

B.7.5 WrtColNextXOR Command

The WrtColNextXOR command XORs column data with existing data and writes the result to the current ColPos, then increments ColPos.

Field	Form	Value
Opcode		0xBF
Column Data	D7 D6 D5 D4 D3 D2 D1 D0	Data

B.8 EXAMPLES

EXAMPLE B-1: WRITE A WORD

This example clears the display and writes “Hi” starting at row 2, column 10. Write the following bytes to the SPI port:

```
0x82          // Clear screen
0xE7, 'H', 10, 2 // Write 'H' to column 10, row 2, then increment the column
0xA8, 'i'      // Write 'i' at column 11, row 2 then increment the column
```

EXAMPLE B-2: DRAW A STRAIGHT LINE

This example draws a straight line from X location (1,1) to Y location (119,3). Write the following bytes to SPI port:

```
0xD7, 1, 1 // Set Pixel cursor to X=1, Y=1
0xDA, 119, 31 // Draw line to X=119, Y=31
```

EXAMPLE B-3: DRAW AN ICON

This example draws an icon 8 pixels tall and 3 pixels wide that looks like a ‘T’ on row = 1, column = 19. Write the following bytes to SPI port:

```
0xDB, 19, 1 // Set Column cursor to X=19, Row = 1
0xBC, 0x01 // Write pixel at top of display at column 19, increment column
0xBC, 0xFF // Write vertical line at column 20, increment column
0xBC, 0x01 // Write pixel at top of display at column 21, increment column
```

dsPICDEM™ 1.1 Development Board User's Guide

NOTES:

Index

A	
Analog Features.....	9
Analog Potentiometers.....	41, 43
Assembler Include Path	18
AVDD Regulator.....	41
B	
Breakpoint.....	25
Build Options.....	18
Build Project.....	19
Building the Code.....	17
C	
CAN Port.....	41, 42
Canned Crystal Socket	41
Code Debugging	22
Codec Reset Switch.....	41
Commands	
Description.....	57
Examples	63
General	58
Power-up Defaults	57
Structure	56
Types	56
Constants	
__SPLIM_init	23
Creating the Project	11
Customer Notification Service.....	5
Customer Support.....	6
D	
Data Acquisition Demo Display.....	28
Data Acquisition Demo Program.....	28
Data Acquisition Display	28
Data and Control Flow	34
Power-up Peripheral Initialization	34
Demo Main Menu.....	27
Demo Menu Options	28
Demonstration Code Module Summary.....	27
Demonstration Performance Metrics.....	37
Summary with FIR Filter	38
Summary with IIR Filter.....	39
Demonstration Program	
Data Acquisition Display	28
DSP Operations Display	30
DTMF Tone Generation	32
Summary	27
Demonstration Programs	10
Development Board Features	
Analog.....	9
Device Clocking	9
ICD 2 and ICE4000 Connections.....	8
Miscellaneous	9
Power Supply Circuit.....	8
Serial Communication Channels.....	8
Voice-band Codec	9
Layout	48
Photograph	7
Schematic	49
Development Board Features	8
Device Clocking Features	9
Device Selection, for Project	12
Digital Potentiometer	44
Documentation Conventions	2
Documentation Numbering Conventions	2
Documentation Updates.....	2
DSP Operations Demo Display.....	30
DSP Operations Display Demo.....	30
DSP Operations Flow Diagram	31
DTMF Tone Generation Controls.....	32
DTMF Tone Generation Demo.....	32
E	
Emulation Headers.....	41, 45
F	
Free Software Foundation.....	3
G	
GNU Language Tools	4
GNU-Language Tools	3
H	
Hardware Components	
Analog Potentiometers.....	41, 43
AVDD Regulator	41
CAN Port.....	41, 42
Canned Crystal Socket	41
Codec Reset Switch.....	41
Digital Potentiometer.....	44
Emulation Headers	41, 45
ICD Connector	41, 44
LCD Graphic Display	41, 44
LEDs	41, 43
Oscillator Options.....	45
Oscillator X2.....	41
Oscillator X3.....	41
Phono Jacks	41
Plug-in Module	42
Power On LED	41
Power Supply.....	45
Power-on Indicator.....	45
Prototyping Area	41, 46
Push Button Switches	41, 43

dsPICDEM™ 1.1 Development Board User's Guide

Reset Switch	41, 46	INTx pins	34		
RS-232 Serial Ports	41, 42	SPI 2	33		
RS-422 Port	41, 43	Timer1	33		
RS-485	43	Timer2	33		
RS-485 Port	41	Timer3	33		
Sample Devices	46	Timer4	33		
Si3000 Codec	41	Timer5	33		
Si3000 External Clock Socket	41	UART2 TX/RX	33		
Si3000 Voice-band Codec	44	Phono Jacks	41		
Temperature Sensor	41, 43	Plug-in Module	42		
VDD Regulator	41	Photograph	8		
I					
ICD Connector	41, 44	Power On LED	41		
Internet Address	4	Power Supply	45		
Interrupts	36	Power Supply Features	8		
DCI	36	Power-on Indicator	45		
DTMF	36	Programming the Chip	19		
External	36	Project Name	14		
LCD Controller	36	Project Window	16		
SPI	36	Project Wizard	12		
Timer 1	37	Prototyping Area	41, 46		
Timer 2	37	Pushbutton Switches	41, 43		
UART Receive	36	R			
UART Transmit	36	Recommended Reading	3		
K				Reference Documents	10
Kit Contents	7	Reset Switch	41, 46		
L				RS-232 Serial Ports	41, 42
Language Toolsuite Selection, for Project	13	RS-422 Port	41, 43		
LCD Controller Interface	55	RS-485 Port	41, 43		
Character Commands	59	S			
Column Commands	62	Sample Devices	46		
Commands	56	Serial Communication Features	8		
Pixel Commands	61	Si3000 Codec	41		
LCD Graphic Display	41, 44	Si3000 External Clock Socket	41		
LEDs	41, 43	Si3000 Voice-band Codec	44		
M				Source Code Window	16, 24
Make Project	19	T			
Microchip Internet Web Site	4	Temperature Sensor	41, 43		
Miscellaneous Features	9	Test Code Module	40		
MPLAB	2	V			
MPLAB ASM30 Assembler	13	VDD Regulator	41		
MPLAB ICD 2	11, 17, 18, 19, 20	Voice-band Codec Features	9		
MPLAB IDE	11, 12, 15, 16, 18, 20	W			
MPLAB IDE Project Wizard	12	Warranty Registration	2		
MPLAB IDE User's Guide	4	Watch Window	24		
MPLAB LINK 30 Object Linker	13	WWW Address	4		
O					
Oscillator Options	45				
Oscillator X2	41				
Oscillator X3	41				
Output Window	16, 19				
P					
Peripherals					
12-bit ADC	33				
Data Converter Interface	34				
Hierarchical/Prioritized Interrupt Control	34				

NOTES:



WORLDWIDE SALES AND SERVICE

AMERICAS

Corporate Office

2355 West Chandler Blvd.
Chandler, AZ 85224-6199
Tel: 480-792-7200
Fax: 480-792-7277
Technical Support: 480-792-7627
Web Address: <http://www.microchip.com>

Atlanta

3780 Mansell Road, Suite 130
Alpharetta, GA 30022
Tel: 770-640-0034
Fax: 770-640-0307

Boston

2 Lan Drive, Suite 120
Westford, MA 01886
Tel: 978-692-3848
Fax: 978-692-3821

Chicago

333 Pierce Road, Suite 180
Itasca, IL 60143
Tel: 630-285-0071
Fax: 630-285-0075

Dallas

4570 Westgrove Drive, Suite 160
Addison, TX 75001
Tel: 972-818-7423
Fax: 972-818-2924

Detroit

Tri-Atria Office Building
32255 Northwestern Highway, Suite 190
Farmington Hills, MI 48334
Tel: 248-538-2250
Fax: 248-538-2260

Kokomo

2767 S. Albright Road
Kokomo, IN 46902
Tel: 765-864-8360
Fax: 765-864-8387

Los Angeles

18201 Von Karman, Suite 1090
Irvine, CA 92612
Tel: 949-263-1888
Fax: 949-263-1338

Phoenix

2355 West Chandler Blvd.
Chandler, AZ 85224-6199
Tel: 480-792-7966
Fax: 480-792-4338

San Jose

1300 Terra Bella Avenue
Mountain View, CA 94043
Tel: 650-215-1444

Toronto

6285 Northam Drive, Suite 108
Mississauga, Ontario L4V 1X5, Canada
Tel: 905-673-0699
Fax: 905-673-6509

ASIA/PACIFIC

Australia

Suite 22, 41 Rawson Street
Epping 2121, NSW
Australia
Tel: 61-2-9868-6733
Fax: 61-2-9868-6755

China - Beijing

Unit 706B
Wan Tai Bei Hai Bldg.
No. 6 Chaoyangmen Bei Str.
Beijing, 100027, China
Tel: 86-10-85282100
Fax: 86-10-85282104

China - Chengdu

Rm. 2401-2402, 24th Floor,
Ming Xing Financial Tower
No. 88 TIDU Street
Chengdu 610016, China
Tel: 86-28-86766200
Fax: 86-28-86766599

China - Fuzhou

Unit 28F, World Trade Plaza
No. 71 Wusi Road
Fuzhou 350001, China
Tel: 86-591-7503506
Fax: 86-591-7503521

China - Hong Kong SAR

Unit 901-6, Tower 2, Metroplaza
223 Hing Fong Road
Kwai Fong, N.T., Hong Kong
Tel: 852-2401-1200
Fax: 852-2401-3431

China - Shanghai

Room 701, Bldg. B
Far East International Plaza
No. 317 Xian Xia Road
Shanghai, 200051
Tel: 86-21-6275-5700
Fax: 86-21-6275-5060

China - Shenzhen

Rm. 1812, 18/F, Building A, United Plaza
No. 5022 Binhe Road, Futian District
Shenzhen 518033, China
Tel: 86-755-82901380
Fax: 86-755-8295-1393

China - Shunde

Room 401, Hongjian Building
No. 2 Fengxiangnan Road, Ronggui Town
Shunde City, Guangdong 528303, China
Tel: 86-765-8395507 Fax: 86-765-8395571

China - Qingdao

Rm. B505A, Fullhope Plaza,
No. 12 Hong Kong Central Rd.
Qingdao 266071, China
Tel: 86-532-5027355 Fax: 86-532-5027205

India

Divyasree Chambers
1 Floor, Wing A (A3/A4)
No. 11, O'Shaughnessy Road
Bangalore, 560 025, India
Tel: 91-80-2290061 Fax: 91-80-2290062

Japan

Benex S-1 6F
3-18-20, Shinyokohama
Kohoku-Ku, Yokohama-shi
Kanagawa, 222-0033, Japan
Tel: 81-45-471-6166 Fax: 81-45-471-6122

Korea

168-1, Youngbo Bldg. 3 Floor
Samsung-Dong, Kangnam-Ku
Seoul, Korea 135-882
Tel: 82-2-554-7200 Fax: 82-2-558-5932 or
82-2-558-5934

Singapore

200 Middle Road
#07-02 Prime Centre
Singapore, 188980
Tel: 65-6334-8870 Fax: 65-6334-8850

Taiwan

Kaohsiung Branch
30F - 1 No. 8
Min Chuan 2nd Road
Kaohsiung 806, Taiwan
Tel: 886-7-536-4818
Fax: 886-7-536-4803

Taiwan

Taiwan Branch
11F-3, No. 207
Tung Hua North Road
Taipei, 105, Taiwan
Tel: 886-2-2717-7175 Fax: 886-2-2545-0139

EUROPE

Austria

Durisolstrasse 2
A-4600 Wels
Austria
Tel: 43-7242-2244-399
Fax: 43-7242-2244-393

Denmark

Regus Business Centre
Lautrup hoy 1-3
Ballerup DK-2750 Denmark
Tel: 45-4420-9895 Fax: 45-4420-9910

France

Parc d'Activite du Moulin de Massy
43 Rue du Saule Trapu
Batiment A - 1er Etage
91300 Massy, France
Tel: 33-1-69-53-63-20
Fax: 33-1-69-30-90-79

Germany

Steinheilstrasse 10
D-85737 Ismaning, Germany
Tel: 49-89-627-144-0
Fax: 49-89-627-144-44

Italy

Via Quasimodo, 12
20025 Legnano (MI)
Milan, Italy
Tel: 39-0331-742611
Fax: 39-0331-466781

Netherlands

P. A. De Biesbosch 14
NL-5152 SC Drunen, Netherlands
Tel: 31-416-690399
Fax: 31-416-690340

United Kingdom

505 Eskdale Road
Winnersh Triangle
Wokingham
Berkshire, England RG41 5TU
Tel: 44-118-921-5869
Fax: 44-118-921-5820

11/24/03